

# User Manual

## NCP-1716

16-port Console Terminal LCD Keyboard Drawer



- 1U 17" screen size
- Designed for SUN, all headless servers



# Contents

## Chapter 1 **Getting Started**

1.1	Important Safeguards.....	1
1.2	Regulatory Notice.....	2
1.3	Package Contents.....	3
1.4	Before Installation.....	4
1.5	Unpacking.....	4
1.6	Optional Accessories.....	4
1.7	Structure Diagram.....	5
1.8	Installation.....	6
1.9	How to Use "N" Series LCD Keyboard Drawer.....	7
1.10	How to Use the Slides .....	8
1.11	How to Use "One Man" Installation Slides .....	9-10

## Chapter 2 **How to Connect Console Terminal LCD Keyboard Drawer**

2.1	Connection Diagram.....	11
2.2	Membrane.....	12
2.3	Configuring the Local Console.....	13-15
2.4	Changing Operating Parameters.....	16-23
2.5	Local Keyboard Commands in Native Mode.....	24
2.6	Connector Pin Assignment.....	25
2.7	Command Guide.....	26
2.8	Device Setup.....	27-28

## Chapter 3 **IP Setting**

3.1	IP Configuration.....	29
3.2	IP Filtering.....	30-31
3.3	Web Server Configuration.....	31-33

## Chapter 4 **Serial Port Configuration**

4.1	Serial Port Configuration.....	34-39
4.2	Connection.....	40
4.3	Serial-to-Serial Function.....	41

# Contents

Chapter 5	<b>System Status &amp; Log</b> .....	42
Chapter 6	<b>System Setting</b>	
	6.1 System Administration.....	43-44
	6.2 Date and Time.....	45
	6.3 Fireware Upgrade.....	46-47
Chapter 7	<b>Operation</b>	
	7.1 On-screen Display Operation.....	48
	7.2 On-screen Menu.....	49
Chapter 8	<b>Standard Specification</b>	
	8.1 Specifications.....	50
	8.2 Keyboard.....	51
Chapter 9	<b>Optional Specification</b>	
	9.1 DC Power Options.....	51
Chapter 10	<b>FAQ</b> .....	52-53
Chapter 11	<b>Dimensions</b> .....	54

**Please read all of these instructions carefully before you use the device. Save this manual for future reference.**

### **What the warranty does not cover**

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
  - ☐ Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - ☐ Repair or attempted repair by anyone not authorized by us.
  - ☐ Any damage of the product due to shipment.
  - ☐ Removal or installation of the product.
  - ☐ Causes external to the product, such as electric power fluctuation or failure.
  - ☐ Use of supplies or parts not meeting our specifications.
  - ☐ Normal wear and tear.
  - ☐ Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

### Legal Information

First English printing, October 2002

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

### Safety Instructions

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the drawer is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.


### Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

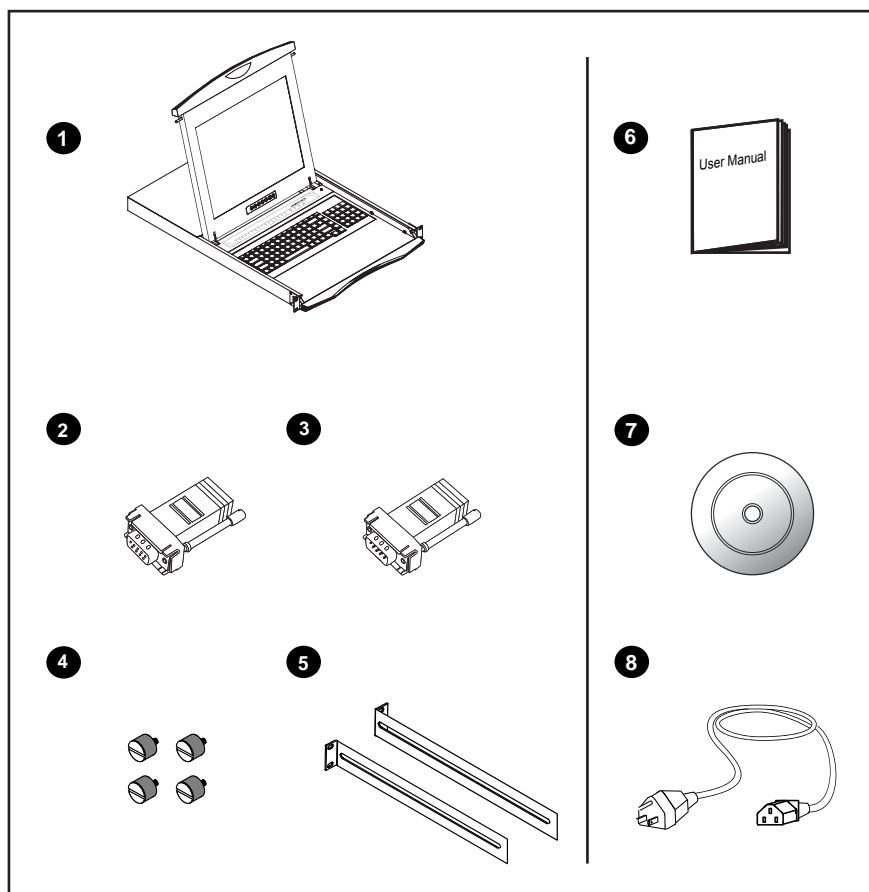

- ① Console terminal LCD keyboard drawer x 1 pc
- ② RJ45-DB9 female adapter x 1 pc
- ③ RJ45-DB9 male adapter x 1 pc
- ④ Fasteners for rear L-bracket x 4 pcs
- ⑤ 330mm rear mounting L-bracket x 1 pair  
\* NCP-1716 mounting depth-adjustable from 320 to 920mm
- ⑥ User manual x 1 pc
- ⑦ CD disc x 1 pc
- ⑧ Power cord x 1 pc

- It is very important to locate the console terminal LCD keyboard drawer in a suitable environment.
- The surface for placing and fixing the Console Terminal Drawer should be stable and level or mounted into a suitable cabinet.
- Make sure the place has good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.
- Position the console terminal LCD keyboard drawer with respect to related facilities.


## 1.5 Unpacking

The console terminal LCD keyboard drawer comes with the standard parts shown on the package contents. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.

## 1.6 Optional Accessories


### 1. RJ45-DB9 adapter

- 1.1 SG-100F RJ45-DB9 female adapter
- 1.2 SG-100M RJ45-DB9 male adapter

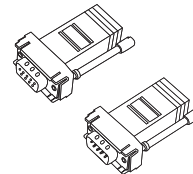


### 2. Cat5 Cable

- 2.1 CU-3 3 feet Cat5 cable
- 2.2 CU-6 6 feet Cat5 cable
- 2.3 CU-10 10 feet Cat5 cable
- 2.4 CU-15 15 feet Cat5 cable
- 2.5 CU-33 33 feet Cat5 cable
- 2.6 CU-66 66 feet Cat5 cable

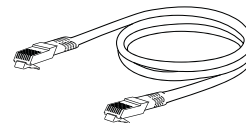


### 3. "One Man" installation slides

- 3.1 NBK-01 Single or "One Man" installation slides
- \* Please refer to P.9 - 10 for Installation guidelines

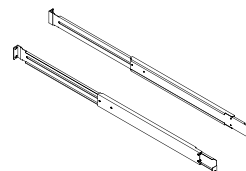


### 4. Power Cord

- 4.1 IEC power cord
- 4.2 NEMA 5-15 power cord (US)
- 4.3 BS 1363 power cord (UK)
- 4.4 CEE 7/4 power cord (German)
- 4.5 AS 3112 power cord (Australia)

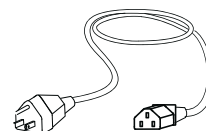




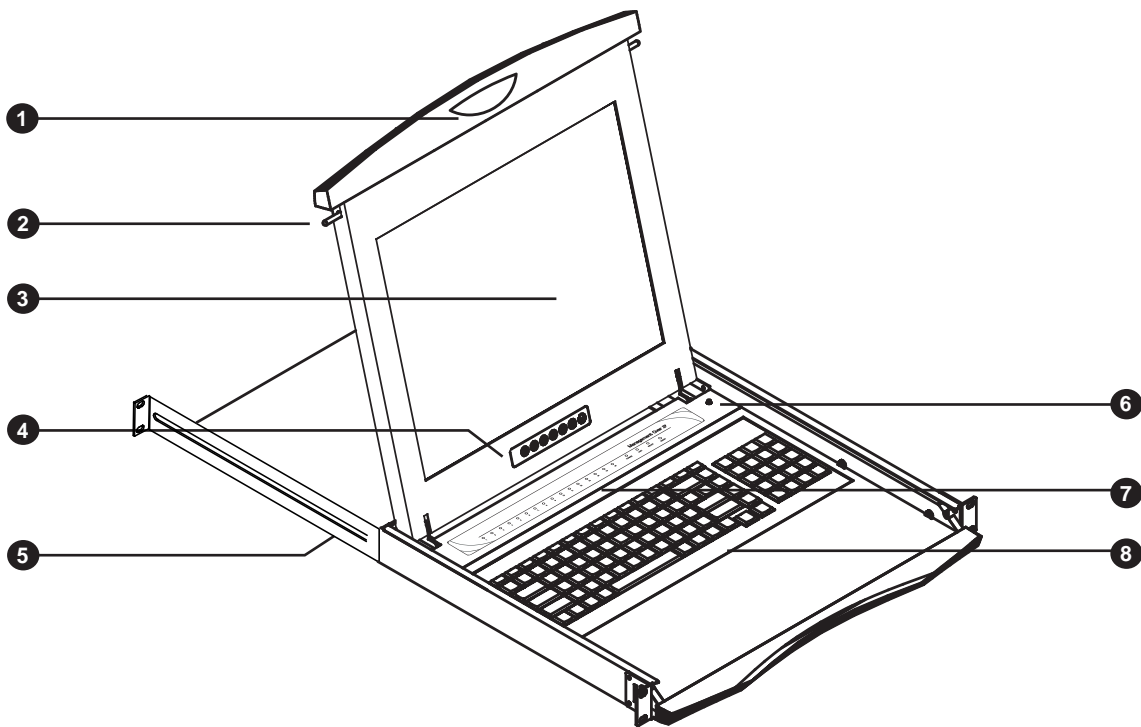


- ① Carry handle to release the 2-pt lock
- ② 2-point lock
- ③ LCD interchangeable module kit
- ④ LCD membrane

- ⑤ Adjustable rear mounting L-bracket
- ⑥ Micro switch for screen auto power off
- ⑦ Serial port status LED
- ⑧ Keyboard interchangeable module kit

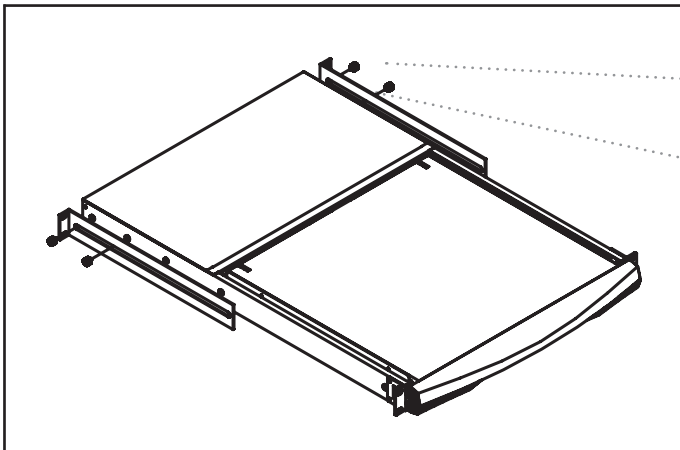


**Figure 1.** Installing the rear L-bracket to the LCD keyboard drawer.

- Install each rear L-bracket using two fasteners shown in **Figure 1**.
- Leaving the fasteners slightly loose.

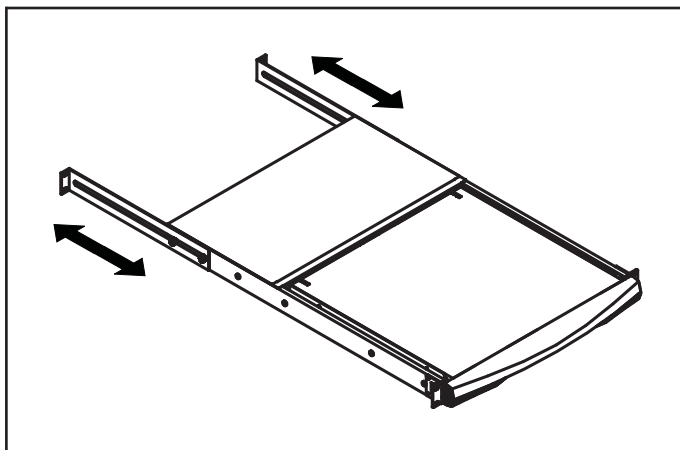

**Figure 2.** Aligning the rear L-brackets to a suitable length for the rack.

- Measure the front and rear mounting depth of the rack.
- Align each rear L-bracket to a suitable length and tighten the fasteners shown in **Figure 2**.

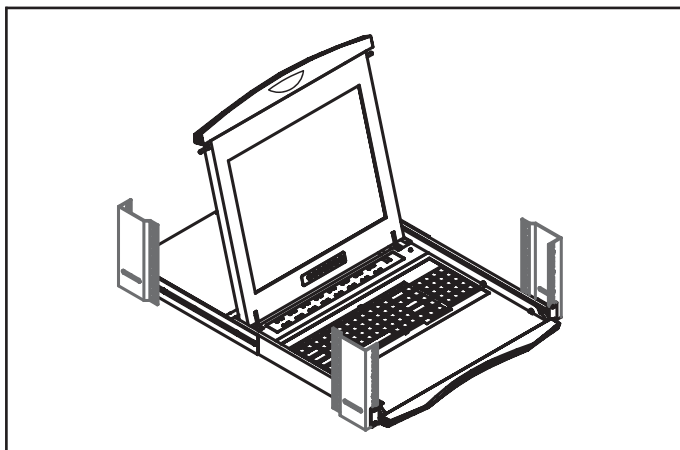

**Figure 3.** Fixing the LCD keyboard drawer into the rack.

- Fix the the LCD keyboard drawer into the rack.

\* Hardware (screws and cage nuts) for fixing the mounting bracket to the rack is not provided.



**Figure 4.** Pulling the tab toward the front of LCD.

- Gently pull the tab toward the front of the LCD shown in **Figure 4**.



**Figure 5.** Flipping up the LCD to a suitable angle.

- Flip up the LCD to a suitable angle shown in **Figure 5**.



- Operate the LCD keyboard drawer shown in **Figure 6**.



**Figure 7.** White arrow button.

- A white arrow release button is located on the outside of each slide (shown in **Figure 7**).



**Figure 8.** Pushing the white arrow button.


- Push the white arrow button on either side of the LCD keyboard drawer to unlock (shown in **Figure 8**). Avoid pressing the red button located on either side.



**Figure 9.** Pushing the LCD keyboard drawer into the rack.

- Hold down the white arrow button until the LCD keyboard drawer is located in the rack (shown in **Figure 9**).


## Package Contents

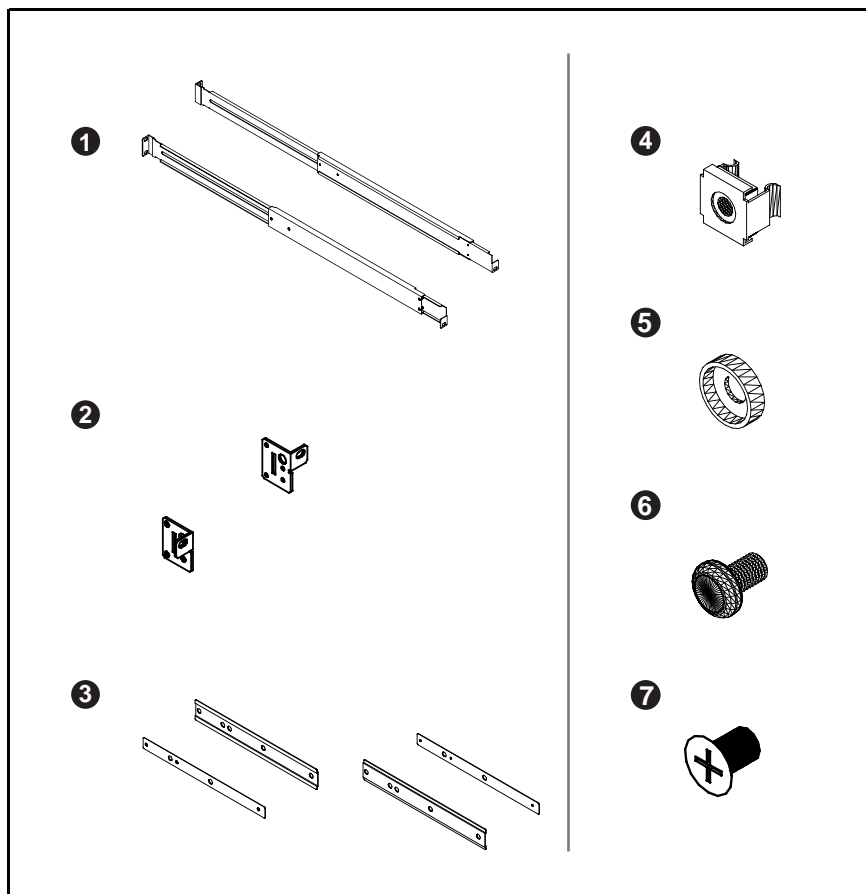



### Model No : NBK-01

- ① Mounting bracket x 2 pcs
- ② Front mounting ear (left & right) x 2 pcs
- ③ Support bracket x 4 pcs
- ④ M6 cage nut x 8 pcs
- ⑤ M6 washer x 8 pcs
- ⑥ M6\*15mm screw x 8 pcs
- ⑦ M3.2\*4.5mm screw x 14 pcs


## Install the front mounting ear x 2 pcs

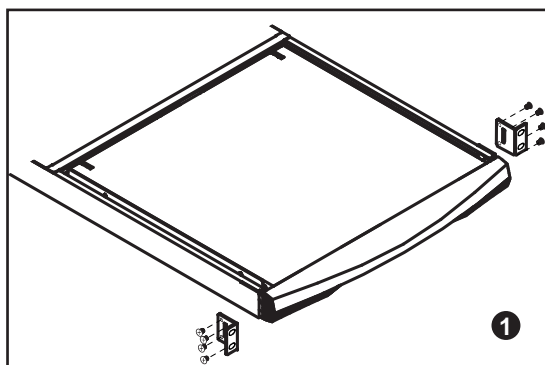


■ Disassemble the standard front mounting ears carefully.

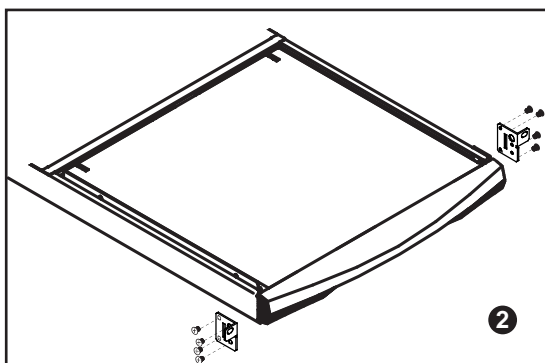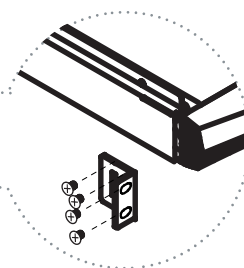


■ Install the optional front mounting ears with M3.2\*4.5mm screw x 8 pcs.

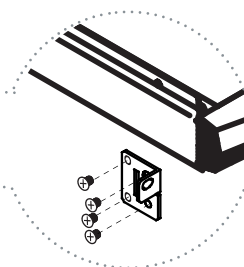


## Install into Rack

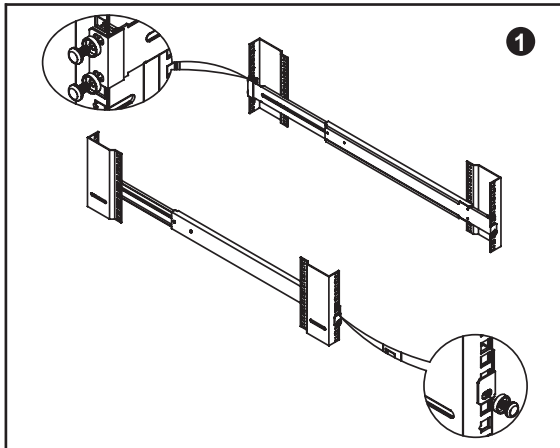

- Attach mounting brackets to vertical mounting rails.
- Leaving the screws slightly loose.

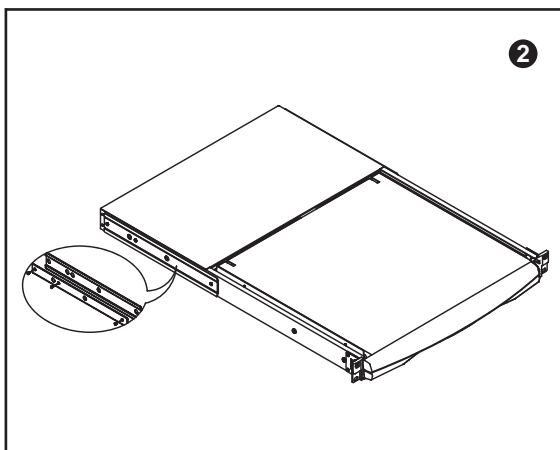


- Attach support brackets to chassis with M3.2\*4.5mm screw x 6 pcs

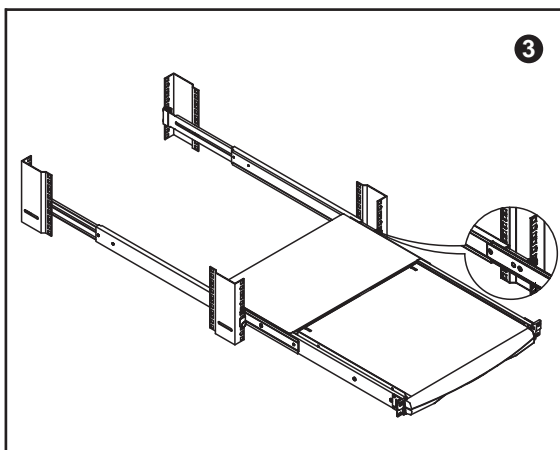


- Pickup the unit.
- Insert inner members of slides into the already mounted internal slide members in the rack.

## Model No : NBK-01

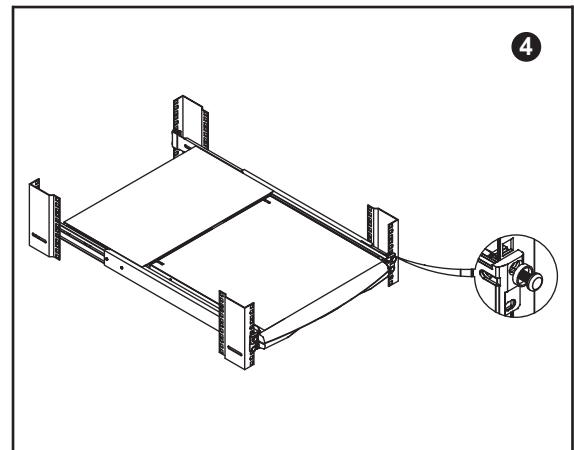


- Attach left and right front mounting ears to vertical mounting rails.
- Tighten the screws.

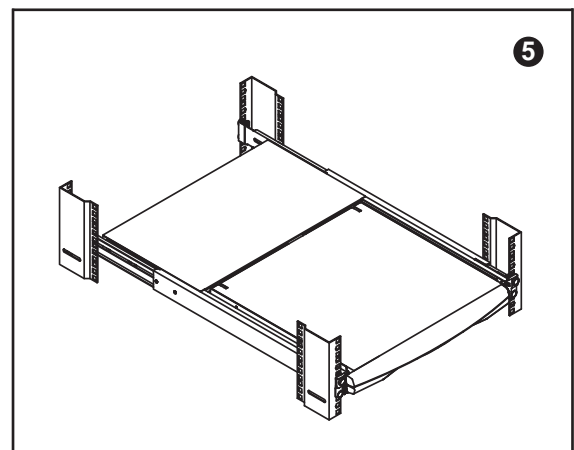

- Installation completed.

**NCP-1716**

Ethernet Console

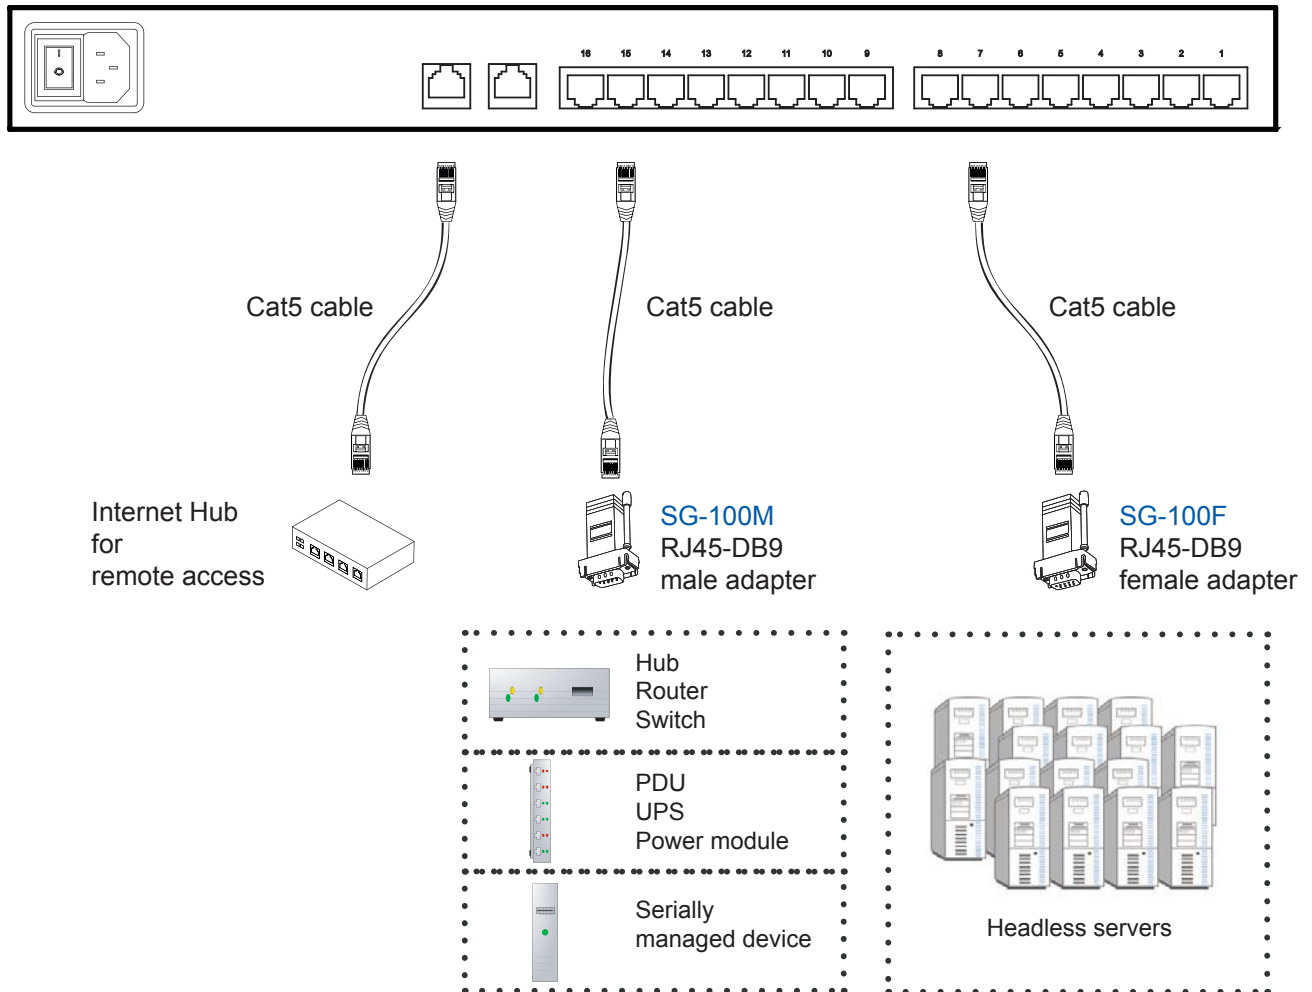


Power ON

- Turn off all devices / servers and Cat5 IP serial console
- Make sure all cables / connectors are properly connected

Front Panel - Port LED Indications

16 ports

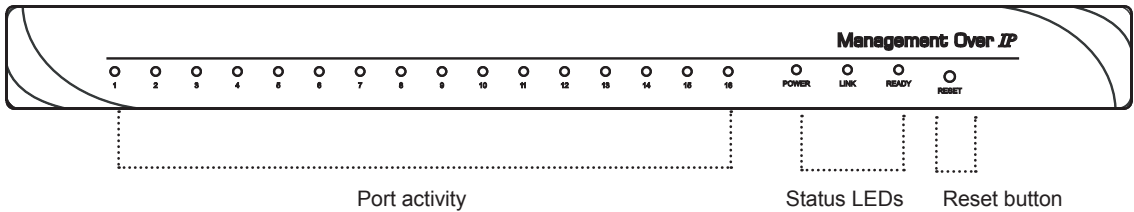

Power	Red:	Power on indication
Link	Orange:	10BaseT Ethernet connection
	Green:	100BaseT Ethernet connection
Ready	Green:	Blinking per second when system is busy
Port LED	Green:	Traffic activity
Reset button		Press reset button to reboot the unit




Warning :

Press "Shift+Esc" sets default, it will change the pre-set operating parameters and local access "Personality", Please refer to FAQ (page 29-30) for detailed setting.




Switch on the power on the rear of NCP-1716.  
(It takes about 60 seconds to initialize the device. Please do not input any key while initialize the device)

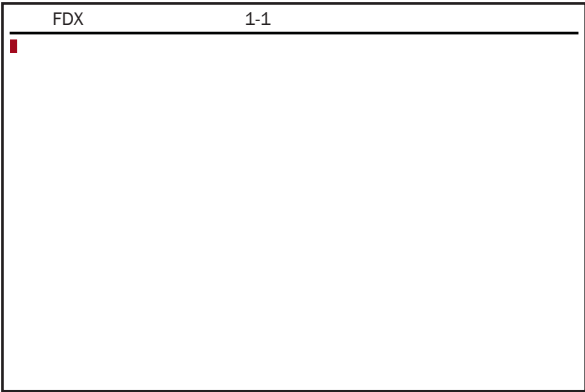

Entering SETUP

Hold down the **Alt** key and then depress the **Esc** key to enter SETUP mode.  
When you enter SETUP mode, any text on the screen temporarily disappears, and the main SETUP directory appears. When you leave the SETUP mode, the main SETUP directory disappears, and any text that was on the screen reappears.

**Caution:** Scroll lock must be off for accessing setup menu by “Alt + Esc” key

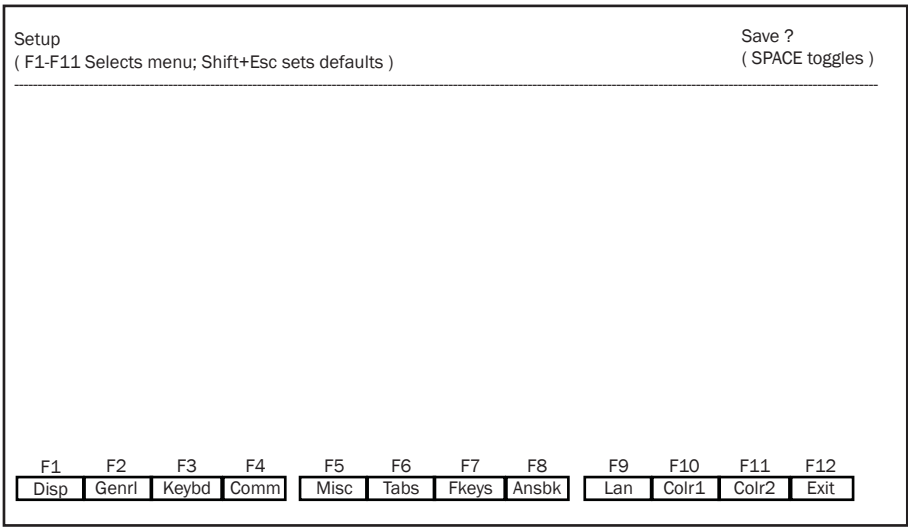

Saving and exiting SETUP

The first menu seen when entering SETUP mode serves as a directory to the other SETUP menus. When you depress **F12** to exit Setup, you will return to this main directory and be given the option of saving your selections.

The highlighted field at the right of the screen gives you the choice of saving or not saving parameter changes in the nonvolatile memory before returning the terminal to the normal operating mode. If you don't save your setting before you leave the SETUP mode, any new selections will be lost when you power down the console terminal drawer.


To save your SETUP selection, depress the **Spacebar** to change the save field at the right side of the screen from **NO** to **YES** before exiting SETUP.

Depress **F12** to exit SETUP mode and return to the normal display mode.


## 2.3 Configuring the Local Console

## Chapter 2


The 16-port serial console drawer with serial-to-serial local access function which the data transfer can be between one designated serial port (ESP) and one of the other serial ports.

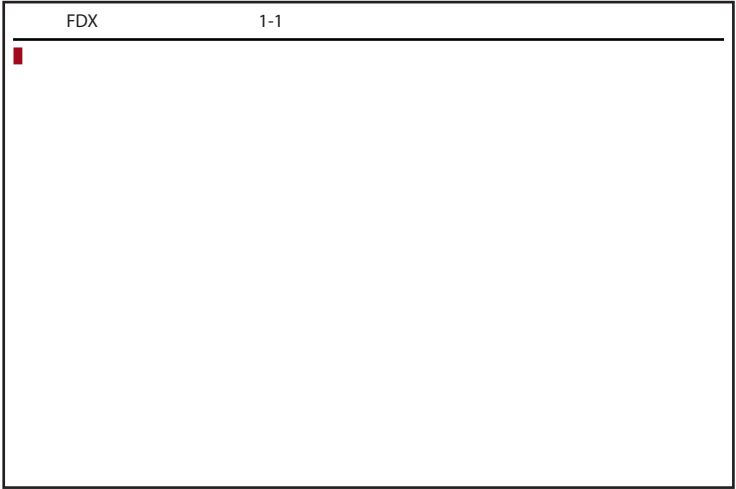

1. Select the access port and configure each setting & type in the value for Inactivity timeout
2. Press SPACE bar to select other items

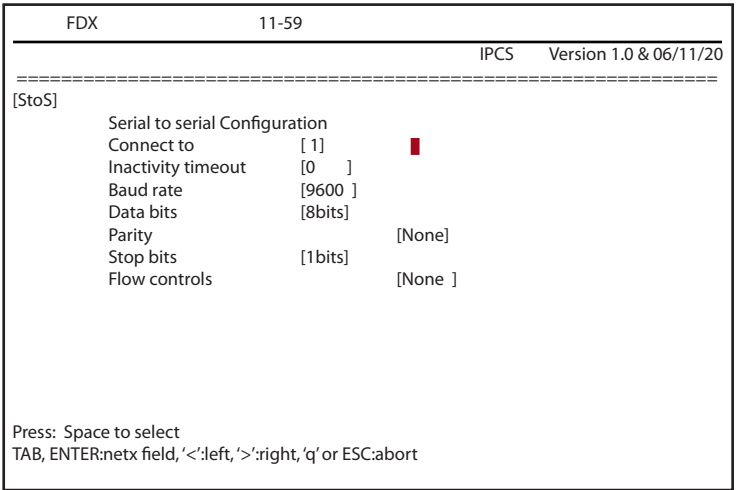

3. Complete the configuration, and select <Yes> to confirm

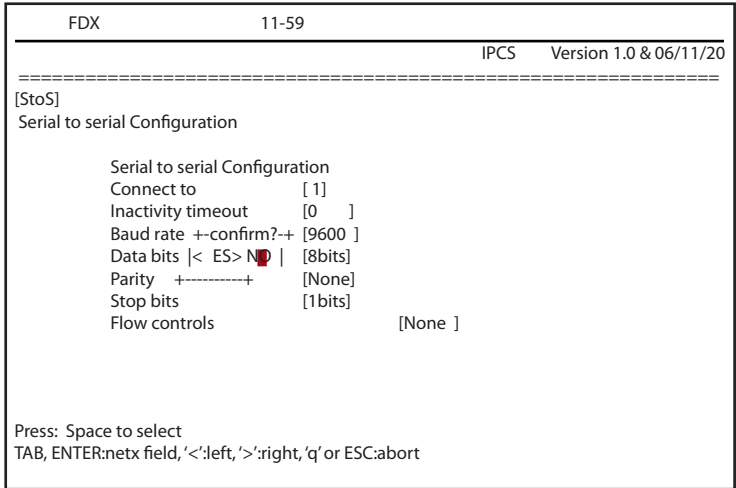


## 2.3 Configuring the Local Console

## Chapter 2

4. Type in user name and password. The default login name & password are "root"

<u>User Name</u>	<u>Default Password</u>
root	root

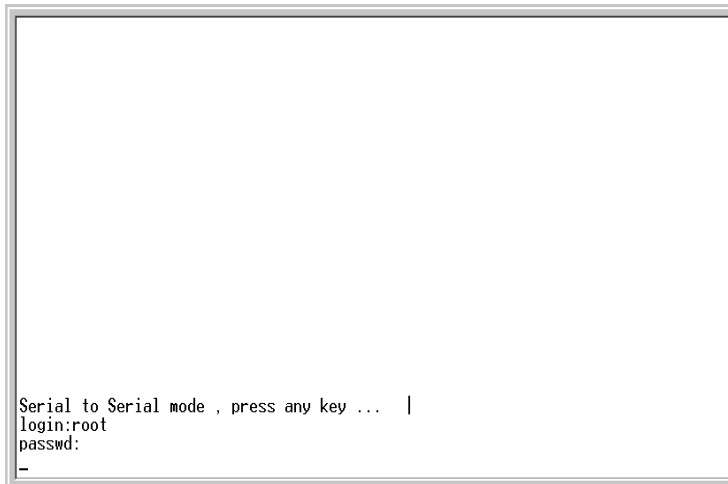

5. Press **Ctrl** and **C** keys to get out of Serial-to-Serial function and back to main console screen.

To select one of the setup menu's shown, press the indicated function key.

- The screen for that menu appears with the name highlighted.
- The fields in the middle of the screen, indicate the parameters that you can change in that menu.
- The top line identifies the keys you press to highlight the parameter fields and change the settings. The procedure is:

(1) Use arrow key to highlight the parameter field you want to change.

(2) Use the Spacebar to change the parameter.

**F12** always returns you to the top menu.

The following tables list the parameters for each menu and explains their settings.

Default settings are listed first unless otherwise noted.

---

### **F1** Display Setup Menu

---

<b>Columns</b>	Sets the screen display for 80 columns, 132 columns, or Econ-80. (80 columns with more pages of memory)
<b>Lines</b>	Sets the screen display for 24, 25, 42, or 43 lines. (25 lines is normally required for PC Term.)
<b>Page Length</b>	Sets the length of a page of display memory to: 1 x Lines: Equal to the number of lines selected in the lines parameter 2 x Lines: Two times the value of the lines parameter 4 x Lines: Four times the value of the lines parameter, or *Equal to the value of the lines parameter, with a second page containing the rest of the lines remaining in memory.
<b>Cursor</b>	Sets the cursor display to blink or steady, block or underline.
<b>Background</b>	Sets the screen display to Dark (light characters on a dark background) or Light (dark characters on a light background).
<b>Auto Page</b>	Cuses a new page of memory to move onto the screen when the cursor reaches the top or bottom of the page.
<b>Screen Saver</b>	Off, 1, 2, 3, 4, 5, 6, means no saver, 5, 10, .... minutes saver.
<b>Width Change Clear</b>	Causes the terminal to clear the screen when executing a command to change the number of columns.
<b>Reverse</b>	Off / On control function ANSI, VT-100 and VT-220: "Off" means, when SGR command ESC [ 3? m and ESC [ 4? m select background and foreground color change respectively. "On" means, when SGR command ESC [ 3? m and ESC [ 4? m select foreground and background color change respectively. (? can be 0,1,2,...,7)
<b>Display</b>	<b>Preset with LCD</b>

---

**F2 General SETUP Menu**


---

<b>Personality</b>	<b>Preset with VT-100, changing the parameter will cause the local access console malfunction</b>
<b>Scroll Speed</b>	Sets the display scroll rate to Jump (the rate data is received), Smooth-8 (eight lines per second), Smooth-4, Smooth-2, or Smooth-1.
<b>Rcvd CR</b>	Causes the cursor to move to the beginning of the current line (CR) or the beginning of the next line (CRLF) when the terminal receives an ASCII CR.
<b>Enhance</b>	Allows the terminal to recognize an enhanced set of codes when the terminal is not in the native personality.
<b>Auto Scroll</b>	Causes the data to scroll up a line when the cursor moves past the last line of the page.
<b>Monitor</b>	Causes the terminal to display symbols for escape sequences and control codes without acting on them. (Test Feature)
<b>Status Line</b>	Sets the top line of the screen as the status line.
<b>End of Line Warp</b>	Causes the cursor to move to the start of the next line when additional characters are entered at the end of a line.
<b>Attribute</b>	Sets display attributes to be assigned to each character as it is entered (Char), to be active to the end of the line (Line), or to be active to the end of the page (Page).

---

**F3 Keybd SETUP Menu**


---

<b>Xmt Limit</b>	Causes the terminal to send data through the HOST port as fast as the baud rate allows (None), or at a maximum rate of 60 cps or 150 cps. In older systems limiting character-rate is necessary to prevent loss of data.
<b>Language</b>	Sets correct terminal operation for the language of the keyboard connected to it: US, UK, Danish, German, Spanish, Swedish, Norwegian, Italian, French, Belgian, Swiss/French, and Swiss/German
<b>Key Repeat</b>	Off, 1, ..., 8 8 different repeat rates after a key has been depressed for about 1/2 seconds.
<b>Margain Bell</b>	Sets the terminal's bell to ring when the cursor reaches the column where the bell is set (default is column 72 in 80-column mode or 124 in 132-column mode).
<b>Keycode</b>	Sets the terminal to send normal ASCII characters (ASCII) or PC-type scan codes for every key up / down (Scan). Scan is required for the PC Term personality.
<b>Keyclick</b>	Sets the terminal to sound a muted beep each time a key is pressed or repeated.
<b>NRC</b>	Sets the terminal to have national replacement character functional.
<b>Bell Volumn</b>	Off, 1, 2, 3 (3 different volume)
<b>Num Start</b>	Off / On when the terminal power on, this field determines whether the numeric pad starts as Numeric (NUM On) or Function (NUM Off).

---

**F4** Comm SETUP Menu
 

---

<b>Baud Rate</b>	Preset with “9600”, changing the parameter will cause the local access console malfunction
<b>Rcv Hndshake</b>	Preset with “None”, changing the parameter will cause the local access console malfunction
<b>Data / Stop Bits</b>	Preset with “8/1”, changing the parameter will cause the local access console malfunction
<b>Xmt Hndshake</b>	Preset with “None”, changing the parameter will cause the local access console malfunction
<b>Parity</b>	Preset with “None”, changing the parameter will cause the local access console malfunction
<b>Comm Mode</b>	Preset with “FDX”, changing the parameter will cause the local access console malfunction
<b>Printer Selection</b>	This setting is not support in this model
<b>Ethernet Mode</b>	This setting is not support in this model
<b>Multiple Sessions</b>	This setting is not support in this model

---

**F5** Misc SETUP Menu
 

---

<b>Wprt Intensity</b>	Normal, blank , dim, blank/dim.
<b>Block End</b>	Causes the terminal to send a block of data to the computer with a line terminator as an ASCII US character and block terminator as an ASCII CR character (US / CR), or with line terminators as ASCII CR and LF characters and the block terminator as an ASCII ETX character (CRLF / ETX).
<b>Wprt Reverse</b>	Sets the write-protected characters to appear in reverse (dark characters on a light background).
<b>Wprt Underline</b>	Sets the write-protected characters to appear underlined.
<b>Ptr Baud Rate</b>	Sets the SERIAL 2 port baud rate to 75, 150, 300, 600, 1200, 2400, 4800, 7200, 9600, 19200, 38400, 57600, 76800, 115200, 230400, 460800.
<b>Ptr Data / Stop Bits</b>	Through the SERIAL 2 port ,the terminal to send and receive 8-bits data with one stop bit or two stop bits, or 7-bits data with one stop or two stops bits.
<b>Ptr Parity</b>	Causes the terminal to send the data to the SERIAL 2 port with none, odd, mark, even, or space parity.
<b>Ptr Xmt Hndshake</b>	None, DSR, Xon / Xoff, Both .
<b>Ptr Rcv Hndshake</b>	None, DTR, Xon / Xoff, DTR/Xoff .



 


## F6 Tabs Setup Menu

On the tabs setup menu screen, the terminal's current tab stops are indicated by uppercase T's displayed along a line of periods that mark each column position.

- (1) A tab stop in columns 2 through 78 is shown as a T in the upper line of periods
- (2) A tab stop in columns 79 through 132 is shown as a T in the lower line of periods

You can easily determine where tabs are set by moving the cursor across the line and reading the column number displayed on the right side of the screen.

Clear and set tabs anywhere on the line, as follows:






- (1) To move the cursor across the line, press  or 
- (2) To either clear or set (toggle) an individual tab stop at the cursor position, press 
- (3) To clear all tabs, press 
- (4) To set tabs to the default setting (every eighth column), press 

**Note:** A tab stop cannot be set to column 1.

## F7 FKeys SET-UP Definition Setup Menu

You can redefine the function keys and many of the editing keys to send a unique character string of up to 64 characters. Keys that are not programmed will send a default sequence which is determined by the personality selected. Below table lists the programmable keys.





To redefine a key:

1. Select the key to be redefined by pressing that key together with . This highlights the key's definition field.
2. Press  to select the shifted or unshifted key definition field.
3. Enter the key definition (up to 62 characters) at the cursor position. Correct errors by pressing  to delete characters or  to clear the definition.
4. If you want to change the key's direction, press  (on the numeric pad) until your choice appears.

Direction determines where the key data is transmitted:

- Remote : Sends data to the computer only, regardless of the terminal's communication mode. (Until redefined, the direction of all the programmable keys is remote.)
- Local : Sends data to the terminal only, regardless of the terminal's communication mode
- Normal : Sends data to the computer and / or the terminal, depending on the terminal's communication mode

### Programmable Keys



Enhanced PC-Style Keyboard	Enhanced Pc-Style Keyboard
F1 through F12	*ENTER
Arrow Key 	ESCAPE
Arrow Key 	HOME
Arrow Key 	INSERT
Arrow Key 	PAGE DOWN
BACKSPACE	PAGE UP
DELETE	PRINT SCREEN
END	TAB

\*Both **ENTER** keys are programmable

---

### **F8** Ansbk SET-UP Menu

---

You can program a message of up to 20 characters to identify the terminal to the computer. Enter the message at the cursor position. Correct errors by pressing  to delete characters  to clear the message.

CONCEAL hides the answerback message, so it is not displayed in SETUP mode.

To save the message in nonvolatile memory, exit SETUP mode with the YES option.

---

### **F9** Lan Setup Menu

---

**This setting is not support in this model**

**Note:** For configuring the ethernet port for remote access, pls refer to page xx for details.



## F10 Color Set-up Menu

The color functionality differs with emulation.

In general VT100, VT220 and ANSI Console work with applications which control the color directly. The remaining personalities associate colors based on existing monochrome video attributes.

This section will define parameter selection based on personality selected.

Background Will determine the color of the background screen under some conditions (16 colors).

**Cursor:** Select the color of the cursor (16 colors).

**Normal F.G. / Normal B.G.:** These fields allow you to select the character and background color (16 colors) for data entered on the display before your application defines the color display remotely.

**Intensity F.G. Intensity B.G.:** These fields allow you to select the character and background color (16 colors) for data entered on the display as Dim in ASCII emulation's and Bold in VT\ANSI emulation's before your application defines the color display remotely.

**Color Mode:** Is automatically selected based on your emulation selected.

**Color Map:** Applies in WY325 mode only and determines if the monochrome attribute Reverse or Blank will be used to map monochrome attributes to color.

	ASCII (NOT WY325)	WY325*	VTXXX	ANSI CONSOLE
Background	The whole data area of the screen will be displayed in this color, when the application hasn't entered character or spaces with the Normal or Intensity B.G. color. Changes in Background color will affect Normal and Intensity B.G. Any clear screen commands will clear to this color.	No Function	Same as ASCII	Same as ASCII
Cursor	Selects Cursor color	Selects Cursor color	Selects Cursor color	Selects Cursor color
Normal F.G.	Selects color of Normal F.G.	No Function	Initial color selection at power up	Initial color selection at power up
Normal B.G.	Selects color of Normal B.G.	No Function	Initial color selection at power up	Initial color selection at power up
Intensity F.G.	Selects color of Intensity F.G.	No Function	Initial color selection at power up	Initial color selection at power up
Intensity B.G.	Selects color of Intensity B.G.	No Function	Initial color selection at power up	Initial color selection at power up
Color Mode (Normal/ Palette)	Automatic	Automatic	Automatic	Automatic
Color Map (Reverse/Blank)	No Function	See Above	No Function	No Function

\* When the WY 325 personality is selected holding the Ctrl key down and depressing either the 0, 1, ..., 9 or (.) period keys in the numeric pad change the assignment of color on the screen. Each selection is called a palette and is described in Color Palette Table

## Color Palettes

Palette	Display Attribute	Foreground Color	BackGround Color
0	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Green Black Blue Black Cyan Black Red Black	Black Yellow Black Blue Black Cyan Black Red
1	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Green Black Yellow Black Cyan Black White Black	Black Red Black Yellow Black Cyan Black White
2	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Cyan Black Red Black Magenta Black Blue Black	Black White Black Red Black Magenta Black Blue
3	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Cyan Black White Black Magenta Black Yellow Black	Black Blue Black White Black Magenta Black Yellow
4	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Magenta Black Blue Black Green Black Red Black	Black Cyan Black Blue Black Green Black Red
5	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Magenta Black White Black Green Black Cyan Black	Black Yellow Black White Black Green Black Cyan
6	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Yellow Black Red Black Cyan Black Magenta Black	Black Yellow Black Red Black Cyan Black Magenta

## Color Palettes

Palette	Display Attribute	Foreground Color	BackGround Color
7	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Red Yellow Magenta Black Cyan Black Green Black	Black Red Black Magenta Black Cyan Black Green
8	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	White Black Red Black Yellow Black Magenta Black	Black White Black Red Black Yellow Black Magenta
9	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	White Black Yellow Black Blue Black Cyan Black	Black White Black Yellow Black Blue Black Cyan
10 (Soft Palette)	Normal Reverse (or blank)*1 Intensity*2 Intensity*2 and reverse (or blank)*1 Underline Underline and reverse (or blank)*1 Underline and intensity*2,*3 Underline, intensity,*2 and reverse (or blank)*1	Green Black Blue Black Cyan Black Red Black	Black Yellow Black Blue Black Cyan Black Red

- \*1. Whether the reverse or blank attribute is mapped to the colors shown depends on an escape sequence or the setting of the Color Map setup parameter on the Attribute menu. The default is reverse. When the blank attribute is mapped, only the background is visible.
- \*2. The intensity is dim in ASCII personalities and bold in ANSI personalities. (The intensity attribute is not supported in the following personalities: Wyse 50+, ADDS A2, TVI 910+, TVI925, and VT52.) The attribute can be disabled by an escape sequence or in setup mode (Intensity Attribute parameter).
- \*3. In each palette, the status line displays the same foreground and background colors as shown here for the underline-and-intensity attribute.

Commands	Key Sequence by Keyboard Style Enhanced PC
Toggle CAPS LOCK on/off	CAPS LOCK
Toggle NUM LOCK on/off	NUM LOCK
Put terminal in SETUP mode	ALT ESC
Partially reset terminal, including communication unlock keyboard, turn off all print modes.	ALT PAUSE
Send break* <sup>1</sup>	BREAK* <sup>2</sup>
Toggle between block and full-duplex modes	SHIFT BREAK
Print Screen formatted	PRINT SCREEN
Turn auxiliary print mode on/off	SHIFT SYS REQ* <sup>3</sup>
Turn monitor mode on/off	CTRL SHIFT 1 (kpd)
Turn status line display on/off	CTRL
Speed scrolling rate	CTRL SHIFT
Slow scrolling rate	CTRL SHIFT
Home cursor and clear page	CTRL SHIFT HOME
Display page 0	CTRL 0kpd
Display page 1	CTRL 1kpd
Display next page (or active other window)* <sup>4</sup>	PAGE DOWN
Display previous page (or active other window)* <sup>5</sup>	PAGE UP
Toggle between split screen* <sup>5</sup> and full screen format	CTRL SHIFT -kpd
Toggle Session 0* <sup>6</sup>	ALT F1
Toggle Session 1* <sup>6</sup>	ALT F2
Toggle Session 2* <sup>6</sup>	ALT F3
Toggle Session 3* <sup>6</sup>	ALT F4
Toggle Session 4* <sup>6</sup>	ALT F5
Toggle Session 5* <sup>6</sup>	ALT F6
Toggle Session 6* <sup>6</sup>	ALT F7
Toggle Session 7* <sup>6</sup>	ALT F8
Toggle Session 8* <sup>6</sup>	ALT F9
Toggle Session 9* <sup>6</sup>	ALT F10
Toggle Session A* <sup>6</sup>	ALT F11
Toggle Session B* <sup>6</sup>	ALT F12
Close the active Session by Local Terminal* <sup>6</sup>	CTRL SHIFT . kpd

\*1. To MODEM port only when configured as data port: has no effect on AUX port.



\*2. [BREAK] = [PAUSE] pressed together with [CTRL].

\*3. [SYS REQ] = [PRINT SCREEN] pressed together with [CTRL].

\*4. If screen is split.

\*5. Splits screen at line 12.

\*6. Only active at Ethernet mode on.

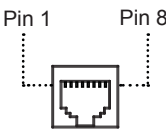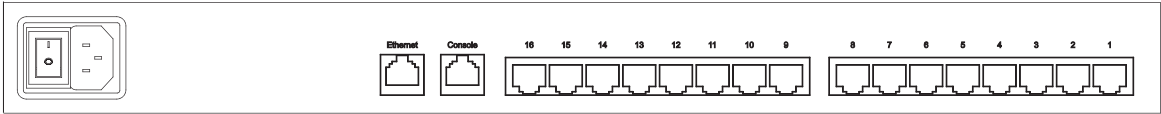

Console port & serial port pin assignment

Pin	Signal	Direction
1	DSR	In
2	RTS	Out
3	GND	--
4	TxD	Out
5	RxD	In
6	DSR	
7	CTS	In
8	DTR	Out

Commands Supported in ASCII Personalities

Below table lists all the ASCII commands recognized by the terminal. The native mode code for the command is given in the second column. (The native mode include WY-325,WY-120 and WY-60.) The remaining columns show the support for the command in other ASCII personalities according to the following notations:

- Same -** Same as native code (code is native to other terminal also)
- Wyse -** Same as native code (Wyse enhancement- code not native to other terminal)
- ENH -** Same as native code when enhance mode is on  
(Wyse enhancement - code not native to other terminal)

A code listed under a nonnative personality indicates that the related terminal's native code is supported. A blank in any column indicates that the command is not supported.


Variables are shown in italics. Their values are listed in alphabetical order at the end of the table.

## 2.1.2 Setup the IP address from Ethernet port

In addition to VT100 interface, we also provide a Network Setup Software tool (IPCS Setup) for the network settings to the IP serial console.

The operation procedures are as follows:

1. Run the software tool IpccSeeker.exe

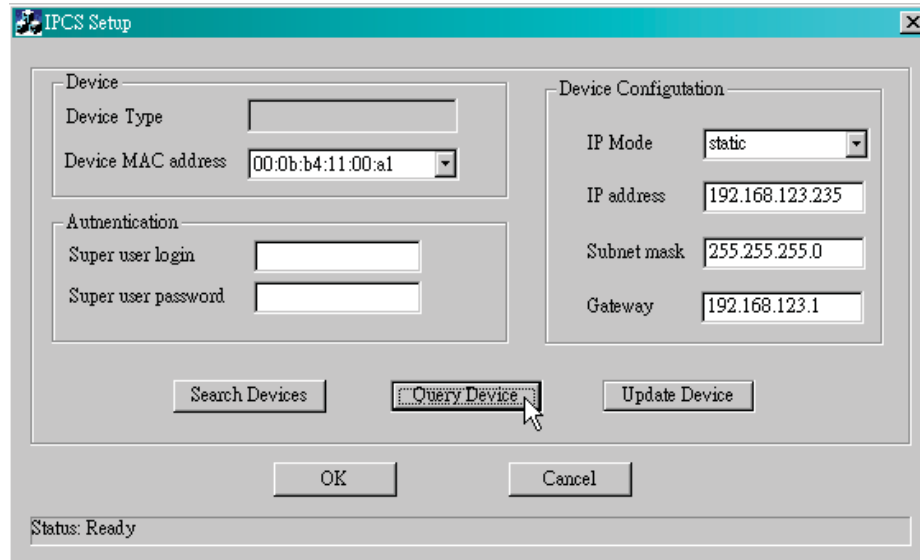

2. Click Search Devices to find out the IP serial console devices on the network. After few seconds, the MAC addresses of found devices will show on Device MAC address field.
3. Select the MAC address on Device MAC address, then click Query Device to get the device configuration on the right pane.
4. If you want to change the settings. Enter the Super user name & password. Change the settings on the right pane. Then click Update Device. The new settings will be save to the IP serial console unit, then the unit will be reboot automatically.

### Access IP serial console

Using the HTTP protocol and entering the configured IP address of IP KVM switch into the web browser to remote access the IP KVM switch.

With successful connection to IP KVM, the login page will show as below, then key in the default user name & password When connecting to the IPCS unit, the IPCS system (web server, Telnet server or SSH server) will prompt user to enter the user name and password in order to access to the system.

There are two levels of access privileges:

User Name	Default Password	Access Privileges
root	root	Full access
(user define)	(user define)	Limit access to serial port

The administrator can add or remove a user easily via the web pages of System administration.



2.1.3 Web Management Interface

The IP serial console (IPCS) supports both HTTP and HTTPS (HTTP over SSL) protocols. The user must authenticate themselves by logging into the system with a correct user name and password

To access the IP serial console Web management pages, enter the pre-set IP address or resolvable hostname into the web browser’s URL/Location field. This will direct the user to the login screen.

Figure below shows the user homepage of the Web management interface. A menu bar, provided on the left hand side of the screen. Selecting an item on the menu bar opens a tree view of all the submenus available under each grouping. Selecting a submenu item will allow the user to modify parameter settings for that item.

Network

[IP configuration](#)

[SMTP configuration](#)

[IP filtering](#)

[Web server configuration](#)

[Dynamic DNS configuration](#)

[RADIUS server configuration](#)

Serial port

System status & log

System administration

[Logout](#)

[Reboot](#)

Save to flash

IP configuration

IP mode :Static

IP address :192.168.123.235

Subnet mask :255.255.255.0

Default gateway :192.168.123.1

Primary DNS :168.95.1.1

Secondary DNS (optional) :168.95.192.1

Server name :IPCS

Save to flash & Reboot

Cancel

Every page will allow the user to Save to flash, Apply or Cancel their actions. To apply all changes made, the user must select Apply. Only when the user selects Apply will the new parameter values be applied to the IP serial console configuration and go effective. But new settings are not save to non-volatile memory (Flash) unless user click Save to flash button.

If the user does not want to save the new parameter values, the user can click Cancel. All changes made will be lost and the previous values restored.



User can do the network IP settings via V-100 or web pages. This chapter describes the usage of web pages. The default IP settings are as follows.

### 3.1.1 IP Configuration

The IP serial console requires a valid IP address to operate within the user's network environment. If the IP address is not readily available, contact the system administrator to obtain a valid IP address for the IP serial console. Please note that the IP serial console requires a unique IP address to connect to the user's network.

There are two types of IP assignments user can choose from:

- Static IP
- DHCP (Dynamic Host Configuration Protocol)

The IP serial console is initially defaulted to Static IP mode, with a static IP address of 192.168.123.211.

\*The onfiguration setting will not go into effect until clicking the button Save to flash & reboot.

### 3.1.2 SMTP Configuration

The IP serial console (IPCS) can send an email notification when the number of system log messages reaches to certain value and/or when an alarm message is created due to an issue with serial port data. The user must configure a valid SMTP server to send these automatically generated emails.

The “device mail address” must be registered to SMTP server.

The IPCS supports two SMTP server types:

- SMTP without authentication
- SMTP with authentication

The SMTP user name and SMTP user password are required when selecting SMTP with Authentication.

Secondary SMTP configuration is also provided so that mail can be delivered even when the primary SMTP server fails. Only when the primary SMTP server fails, the secondary SMTP server will be tried for mail delivery.

## 3.2.1 IP Filtering

The IP filtering function keeps unauthorized hosts from accessing to the IP serial console by specifying IP filtering rules. It is important to fully understand what an IP filter is. If you don't fully understand this, you will get unexpected results against your original plan.

The IP address/Mask specifies the host range by entering base host IP address followed by / and subnet mask. The host IP addresses to be filtered based on the rule defined. The table below gives examples of IP address/Mask settings.

Specified host range	Base Host IP address	Subnet mask
Any host	0.0.0.0	0.0.0.0
192.168.1.120	192.168.1.120	255.255.255.255
192.168.1.1 ~ 192.168.1.254	192.168.1.0	255.255.255.0
192.168.0.1 ~ 192.168.255.254	192.168.0.0	255.255.0.0
192.168.1.1 ~ 192.168.1.126	192.168.1.0	255.255.255.128
192.168.1.129 ~ 192.168.1.254	192.168.1.128	255.255.255.128


The Port is a port or port range of the IP serial console which hosts try to access to.

**Chain rule**

The chain rule determines whether the access from the hosts is allowed or not. It can be one of the these two values :

- ACCEPT : access allowed
- DROP : access not allowed

When the IPCS receives a TCP packet, it will process the packet with the chain rule depicted below. The process ordering is important; The packet will enter the chain rule 1 first, if meet the rule then take action directly, otherwise go to chain rule 2.

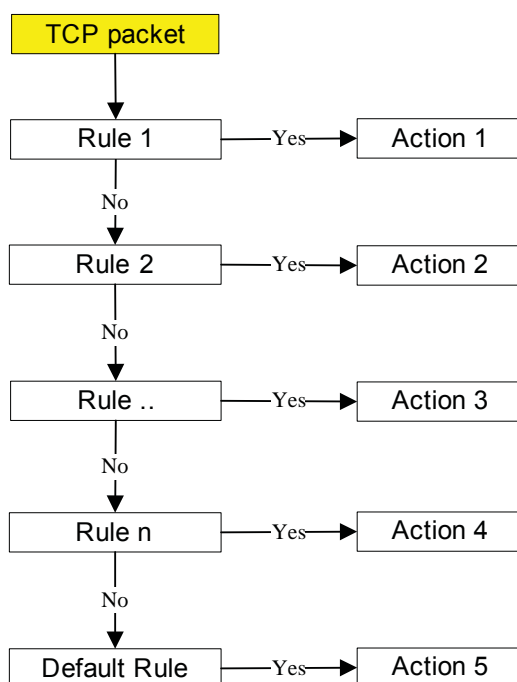

## 3.2.1 IP Filtering

Users can add a new IP filtering rule by setting the properties at adding line and then clicking the button Add. User can remove a rule by clicking the button Remove.

#	Interface	Option	IP address/Mask	Port	Chain rule	Action
1	eth0	Normal	192.168.1.0/255.255.255.0	80	ACCEPT	Remove
2	eth0	Normal	192.168.2.0/255.255.255.0	80	ACCEPT	Remove
3	eth0	Normal	0.0.0.0/0.0.0.0	80	DROP	Remove
	eth0	Normal			ACCEPT	Add

Service	Status	Action
Telnet console	Enabled	Enable Disable
SSH console	Enabled	Enable Disable
Web configuration	HTTP disabled : HTTPS enabled	Enable Disable

IP filtering enable/disable : enable

Apply Cancel

In the example above, no host is allowed to connect to the IPCS through http (port 80) by the #3 rule but the hosts whose subnet is 192.168.1.x is allowed by the #1 rule and 192.168.2.x by the rule #2. So, only the hosts which belong to the subnet 192.168.1.x or 192.168.2.x can access to the IPCS through http by the #1, #2 and #3 rules.

## 3.3 Web Server Configuration

The IP serial console Web server supports both HTTP and HTTPS (HTTP over SSL) services simultaneously. Users can select user authentication method for the IPCS web pages login. The IP serial console currently provides authentication methods of Local and RADIUS.

## 3.3.1 Local

The IP serial console always refers to the local database for the web server login user authentication.


Web server configuration

Authentication method : Local

Apply Cancel

## 3.3.2 Dynamic DNS

When users connect the IP serial console (IPCS) to a DSL line or use a DHCP configuration, and get a dynamic IP address from the network, the IP address may not be the same as previous. It can therefore be very difficult to know if an IP address has changed, or what the new IP address is.

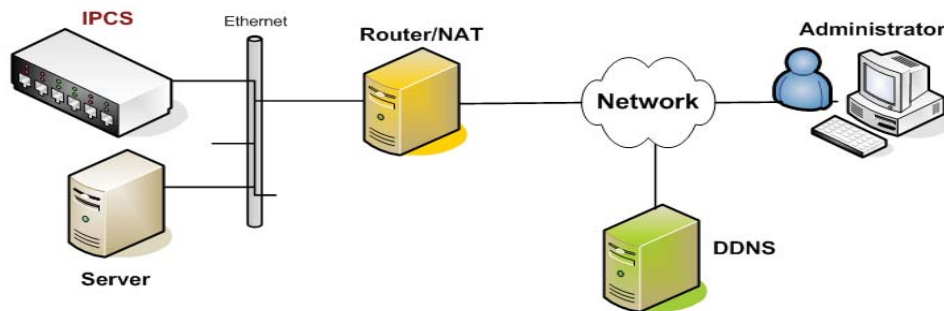

A Dynamic DNS service is provided by various ISPs or organizations to deal with the above issue. By using the Dynamic DNS service, users can access the IPCS through the hostname registered in the Dynamic DNS Server regardless of any IP address change.

By default, the IPCS only supports Dynamic DNS service offered at Dynamic DNS Network Services, LLC ([www.dyndns.org](http://www.dyndns.org)).

To use the Dynamic DNS service provided by Dynamic DNS Network Services, the user must set up an account in their Members' NIC (Network Information Center - <http://members.dyndns.org>). The user may then add a new Dynamic DNS Host link after logging in to their Dynamic DNS Network Services Members NIC.

After enabling the Dynamic DNS service in the Dynamic DNS Configuration menu, the user must enter the registered Domain Name, User Name, and Password. After applying the configuration change, users can access the IPCS using only the Domain Name. The DNS (Domain Name Systems) is the internet service that translates your domain names into IP addresses.

<b>Network</b> <a href="#">IP configuration</a> <a href="#">SMTP configuration</a> <a href="#">IP filtering</a> <a href="#">Web server configuration</a> <a href="#">Dynamic DNS configuration</a> <a href="#">RADIUS server configuration</a> <b>Serial port</b> <b>System status &amp; log</b> <b>System administration</b> <a href="#">Logout</a> <a href="#">Reboot</a> <input type="button" value="Save to flash"/>	<b>Dynamic DNS configuration</b> Dynamic DNS : <input type="text" value="Disable"/> Domain Name : <input type="text" value="yourdomainname"/> User Name : <input type="text" value="yourusername"/> Password : <input type="password" value="*****"/> <input type="button" value="Apply"/> <input type="button" value="Cancel"/>
--	---

## 3.3.3 HTTPS / SSL

The IP serial console Web server supports both HTTP and HTTPS (HTTP over SSL) services simultaneously. The user can enable or disable security function of each port individually. HTTPS provides a secure, encrypted web interface over SSL (secure sockets layer). The following steps to use the HTTPS protocol:


1. Change the URL from "http://xxx.xxx.xxx/" to "https://xxx.xxx.xxx/".
2. If connect success, it will show up the "Lock" icon on the right-hand side of the taskbar.



3.3.4 RADIUS

Authentication is the process of identifying an individual, usually based on a username and password. The IP serial console supports various authentication options, such as Local, RADIUS, to authenticate the users who access the serial port. When the authentication is set to Local, the IPCS will use its own user list to authenticate a user. If configured otherwise, the IPCS will request authentication from the external authentication servers (i.e. RADIUS).

Figure below shows conceptually the user authentication process when using an external authentication server..

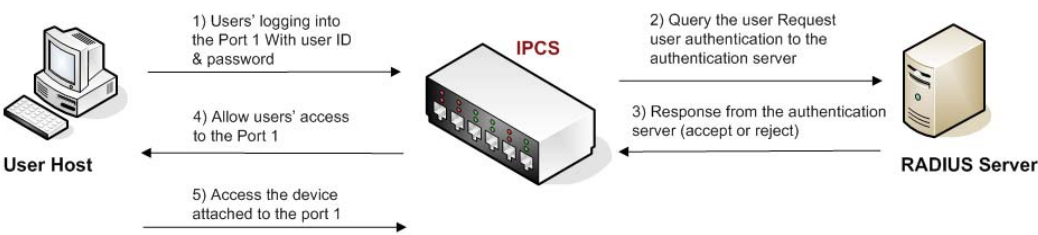

Network

[IP configuration](#)  
[SMTP configuration](#)  
[IP filtering](#)  
[Web server configuration](#)  
[Dynamic DNS configuration](#)  
[RADIUS server configuration](#)

Serial port

System status & log

System administration

[Logout](#)  
[Reboot](#)  

Save to flash

Web server configuration

Authentication method : 

RADIUS down - Local

Apply

Cancel

Radius server configuration

Network

[IP configuration](#)  
[SMTP configuration](#)  
[IP filtering](#)  
[Web server configuration](#)  
[Dynamic DNS configuration](#)  
[RADIUS server configuration](#)

Serial port

System status & log

System administration

[Logout](#)  
[Reboot](#)  

Save to flash

RADIUS server configuration

RADIUS authentication server :

192.168.123.215

RADIUS timeout (0-300 sec.) :

5

RADIUS secret key :

testing123

Apply

Cancel

Under the Serial Port heading, click Configuration will show the list of port summary as below.

Network		Serial port configuration					
<b>Serial port</b>		<a href="#">Port Authentication</a>					
<a href="#">Configuration</a>		Individual port configuration					
<a href="#">Connection</a>		Port#	Title	Mode	Dest/AssignedIP	Port	Proto Serial-settings
<b>System status &amp; log</b>		1	<a href="#">Port_Title#1</a>	CS	-	4001	Telnet 9600-N-8-1-No
<b>System administration</b>		2	<a href="#">Port_Title#2</a>	CS	-	4002	Telnet 9600-N-8-1-No
<a href="#">Logout</a>		3	<a href="#">Port_Title#3</a>	CS	-	4003	SSH 9600-N-8-1-No
<a href="#">Reboot</a>		4	<a href="#">Port_Title#4</a>	CS	-	4004	Telnet 9600-N-8-1-No
<a href="#">Save to flash</a>		5	<a href="#">Port_Title#5</a>	CS	-	4005	Telnet 9600-N-8-1-No
		6	<a href="#">Port_Title#6</a>	CS	-	4006	Telnet 9600-N-8-1-No
		7	<a href="#">Port_Title#7</a>	CS	-	4007	Telnet 9600-N-8-1-No
		8	<a href="#">Port_Title#8</a>	CS	-	4008	Telnet 9600-N-8-1-No
		9	<a href="#">Port_Title#9</a>	CS	-	4009	Telnet 9600-N-8-1-No
		10	<a href="#">Port_Title#10</a>	CS	-	4010	Telnet 9600-N-8-1-No
		11	<a href="#">Port_Title#11</a>	CS	-	4011	Telnet 9600-N-8-1-No
		12	<a href="#">Port_Title#12</a>	CS	-	4012	Telnet 9600-N-8-1-No
		13	<a href="#">Port_Title#13</a>	CS	-	4013	Telnet 9600-N-8-1-No
		14	<a href="#">Port_Title#14</a>	CS	-	4014	Telnet 9600-N-8-1-No
		15	<a href="#">Port_Title#15</a>	CS	-	4015	Telnet 9600-N-8-1-No
		16	<a href="#">Port_Title#16</a>	CS	-	4016	Telnet 9600-N-8-1-No

#### 4.1.1 Port Authentication

Authentication is the process of identifying an individual, usually based on a username and password. The IP serial console supports various authentication options, such as Local, RADIUS, to authenticate the users who access the serial port.

When the authentication is set to Local, the IP serial console will use its own user list to authenticate a user. If configured otherwise, the IPCS will request authentication from the external authentication servers (i.e. RADIUS). Figure below shows conceptually the user authentication process when using an external authentication server.

Network		Port authentication	
<a href="#">IP configuration</a>		Authentication method :	<div>RADIUS</div>
<a href="#">SMTP configuration</a>			<div>Local</div>
<a href="#">IP filtering</a>			<div>RADIUS</div>
<a href="#">Web server configuration</a>			<div>RADIUS server - Local</div>
<a href="#">Dynamic DNS configuration</a>			<div>Local - RADIUS server</div>
<a href="#">RADIUS server configuration</a>			<div>RADIUS down - Local</div>
<b>Serial port</b>		<div>Apply</div>	<div>Cancel</div>
<b>System status &amp; log</b>			
<b>System administration</b>			
<a href="#">Logout</a>			
<a href="#">Reboot</a>			
<a href="#">Save to flash</a>			


#### 4.1.2 Port Enable / Disable

Each serial port can be enabled or disabled. A disabled serial port cannot be accessed by user. User can reset the serial port to default settings by clicking the button Set to default.


Network		Serial port configuration - 1 : Port_Title#1	
<b>Serial port</b>		<div>--- Move to ---</div>	
<a href="#">Configuration</a>		<b>Enable/Disable this port</b>	
<a href="#">Connection</a>		Enable/Disable this port : <div>Enable</div>	
<b>System status &amp; log</b>		<div>Apply</div> <div>Cancel</div>	
<b>System administration</b>		Set this port as factory default : <div>Set to default</div>	
<a href="#">Logout</a>		<a href="#">Port title</a>	
<a href="#">Reboot</a>		<a href="#">Operation mode</a>	
<a href="#">Save to flash</a>		<a href="#">Serial port parameters</a>	
		<a href="#">Port logging</a>	

4.1.3 Port Title

Users can enter descriptive information for each port based on the device attached to it.

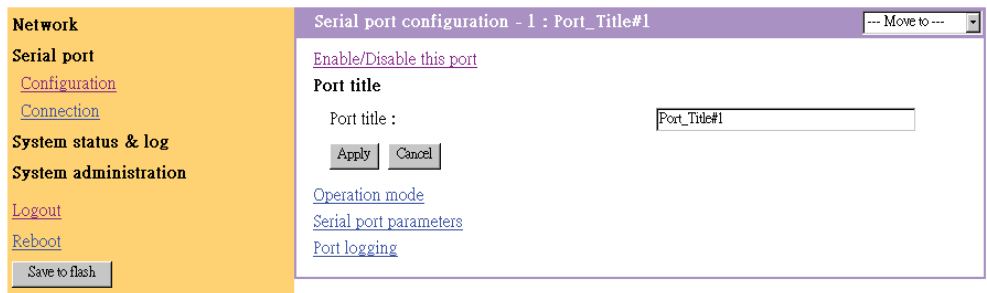


We can use the shortcut Move to on the up-right corner to go to the wished port page directly

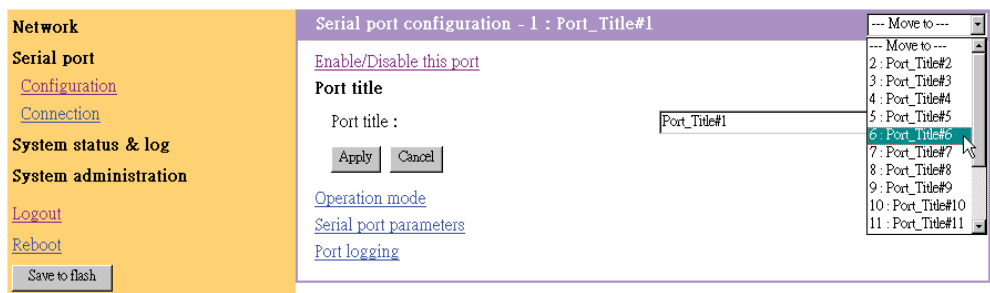

## 4.1.4 Operation Modes

The IP serial console unit provides four types of operation modes. These are described in the following sections.

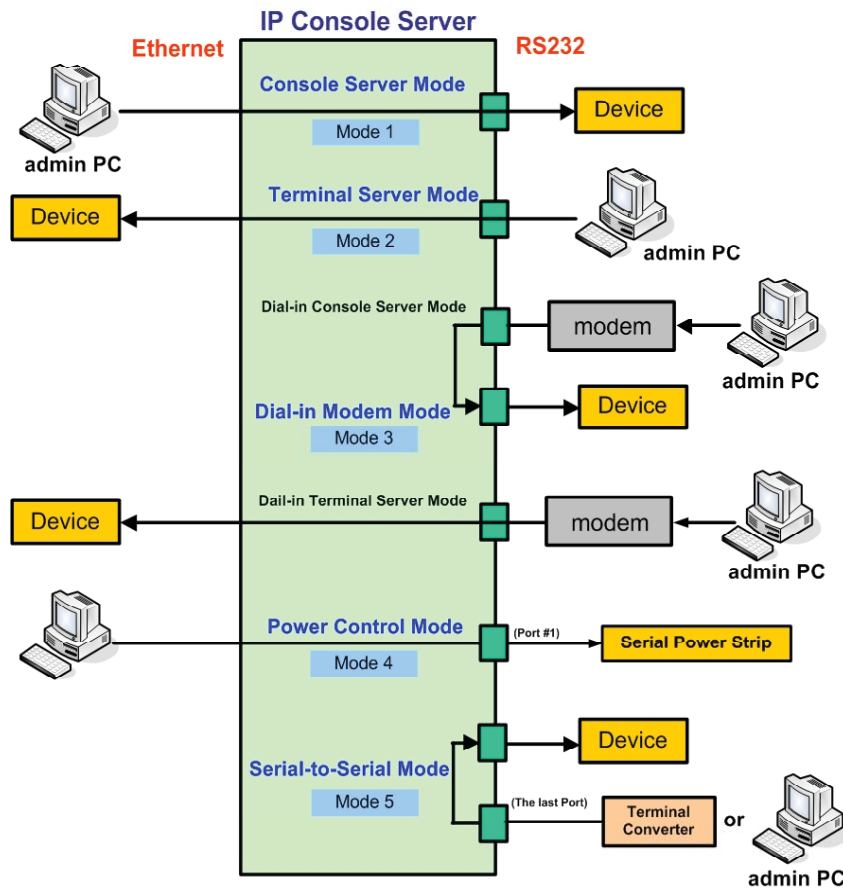**Note :**

- The Power Control Mode is available in port #1 only.
- The last port (e.g., Port #16 of IPCS-16) can also be used as External ESP (Entry Serial Port) in Serial-to-Serial operation mode. Refer to the section Serial-to-Serial Function for details.

Network	Serial port configuration - 1 : Port_Title#1
<b>Serial port</b> <a href="#">Configuration</a> <a href="#">Connection</a> <b>System status &amp; log</b> <b>System administration</b> <a href="#">Logout</a> <a href="#">Reboot</a> <input type="button" value="Save to flash"/>	<div> <a href="#">Enable/Disable this port</a>  <a href="#">Port title</a> </div> <div> <b>Operation mode</b>            Operation mode : <input type="text" value="Console server"/>            Assigned IP : <input type="text" value="192.168.2.101"/>            TCP port (Listening 1024-65535) : <input type="text" value="23"/>            Destination IP : <input type="text" value="192.168.2.101"/>            Protocol : <input type="text" value="Telnet"/>            Port break sequence : <input type="text" value="~break"/>            Inactivity timeout (1-3600 sec, 0 for unlimited) : <input type="text" value="0"/>            Modem init string : <input type="text" value="ats0=2s2=255"/>  <input type="button" value="Apply"/> <input type="button" value="Cancel"/> </div> <div> <a href="#">Serial port parameters</a>  <a href="#">Port logging</a> </div>



**Console Server Mode**

Configuring a serial port as a console server creates a TCP socket on the IP serial console unit that listens for a Telnet or SSH client connection. When you connect to the TCP socket, you have access to the device attached to the serial port as if the device were connected directly to the network. Data stream can be sent back and forth between the device and the Telnet/SSH client program. RawTCP is also supported with the Console Server Mode.

For console server mode, the user can configure the following parameters:

**Listening TCP port number**

The user can also access a serial port through the IP address of the IP serial console and the listening TCP port number of the serial port. If the IP address of the IP serial console and the serial port are assigned as 192.168.123.100 and listening TCP port number 4001, the user can connect to the port as follows:  
telnet 192.168.123.100 4001

**Protocol**

Select Telnet, SSH or Raw TCP as the protocol. If the users are using a Telnet client program, select Telnet. If the users are using an SSH client program, select SSH. When Raw TCP is selected, direct TCP socket communication is available between the IPCS and the remote host.

**Inactivity timeout**

In order to avoid a client holding a TCP connection while no data transferring on the serial port for long time. If the inactivity timeout is enabled, and no data activity between the IP serial console and the Telnet/SSH client for the specified inactivity timeout interval (no data activity in the serial port), the existing TCP session will automatically be closed. If the user wants to maintain the connection indefinitely, configure the inactivity timeout period to 0.

**TCP Keep-alive (no configuration required)**

In order to avoid TCP connection lockup, the IP serial console will continue to check the connection status between the Telnet/SSH client and the IP serial console by sending "keep alive" packets periodically. If the Telnet/SSH client does not answer the packets in a period of time, system will assume that the connection is down unintentionally. The IPCS will close the existing Telnet/SSH connection, regardless of the inactivity setting. So the TCP connection won't be deadlocked when user's application closed improperly or the network link interrupted.

**Terminal Server Mode**

In terminal server mode, the IP serial console will unit's serial port is configured to wait for data from the device connected to the port. If data arrive is detected, the IPCS unit starts a TCP session as a Telnet or SSH client to a pre-defined server. The server must be defined by you before the port can be configured for a Telnet or SSH client. This mode is used when you want to access servers on the network from a serial terminal. RawTCP is also supported with the Terminal Server Mode.

**Dial-in Modem Mode**

In this mode, the IP serial console unit assumes an external modem is attached to the serial port and is waiting for a dial-in connection from a remote site. When a user dials-in using a terminal application, the IP serial console unit accepts the connection and displays the appropriate prompt or menu for you that logged in.

The screenshot shows a web-based configuration interface for a serial port. On the left is a navigation menu with links for Network, Serial port, Configuration, Connection, System status & log, System administration, Logout, Reboot, and a Save to flash button. The main area is titled 'Serial port configuration - 2 : Port\_Title#2' and contains several sections: 'Enable/Disable this port', 'Port title', 'Operation mode', and configuration fields. The 'Operation mode' dropdown is set to 'Dial-in modem'. Other fields include 'Assigned IP', 'TCP port (Listening 1024-65535)', 'Destination IP' (192.168.2.102), 'Protocol' (Telnet), 'Port break sequence' (~break), 'Inactivity timeout' (0), and 'Modem init string' (ats0=2s2=255). There are Apply and Cancel buttons at the bottom, along with links for 'Serial port parameters' and 'Port logging'.

4.1.5 Serial Port Parameters

To connect the serial device to the IPCS serial port, the serial port parameters of the IPCS should match exactly to that of the serial device attached.

Network

Serial port

[Configuration](#)

[Connection](#)

System status & log

System administration

[Logout](#)

[Reboot](#)

Save to flash

Serial port configuration - 1 : Port\_Title#1

--- Move to ---

[Enable/Disable this port](#)

[Port title](#)

[Operation mode](#)

Serial port parameters

Baud rate :

9600

Data bits :

8 bits

Parity :

None

Stop bits :

1 bit

Flow control :

None

Apply

Cancel

[Port logging](#)

4.1.6 Port Logging

With the Port logging feature while in console server mode, the data receiving from the tracking serial port will be buffered in IPCS memory. The user can also define keywords for each serial port that will trigger an email notification if the keyword is found in the logged data. This will enable the user to monitor the data from the attached device. The Port logging feature is valid and visible only if the operation mode of the serial port is configured to console server mode.

Network

Serial port

[Configuration](#)

[Connection](#)

System status & log

System administration

[Logout](#)

[Reboot](#)

Save to flash

Serial port configuration - 1 : Port\_Title#1

--- Move to ---

[Enable/Disable this port](#)

[Port title](#)

[Operation mode](#)

[Serial port parameters](#)

Port logging

Port logging :

Enable

Port log buffer size (KB, 200 max.):

128

Port logging filename :

Specify below

(null as default file name[portXXdata])

portdata

Monitoring interval (sec, 5-3600) :

5

Apply

Cancel

Port log :

[24;6H[24;6H[1;1H[1;1H[3;18H[4;18H[5;18H[6;18H[7;18H[8;18H[9;18H[10;18H[11;18H[12;18H[13;18H[14;18H[15;18H[16;18H[17;18H[18;18H[19;18H[24;6HEnter characters. [5;42H[24;6HEnter characters. [6;42H[2J

Clear

Refresh

[Port event handling](#)

## 4.1.6 Port Logging

If Port logging option is enabled, the user can let the IP serial console to search a defined keyword from the port logging data and send an email to an administrator by Port event handling configurations. Each reaction can be configured individually upon each keyword. Reaction can be an email delivery.

The memory buffer for port logging data are pre-allocated at the size as follows:

Port Number of IP serial console	Memory Size (Bytes / Port)	Total Memory Size
16	192K	3M
48	64K	3M

**Remark :**

- If the logging data grows larger than the pre-allocated size, the new data will overwrite the old data.

## 4.2 Connection


The IP serial console web pages provide a web-based serial port connection which enables the user to access the serial ports without using the Telnet client program.

A Java applet is used to provide the text-based user interface to access the serial port. This Java applet supports only Telnet in Console Server mode. The user cannot access the serial port via the web when the host mode of the port is set to Raw TCP connection. The user is asked to enter user ID and password to access the port. Once authenticated, the user now has access to the serial port.


**Notes:** In order to run this function, the system need support J2RE (Java 2 Runtime Environment) 1.5 and above, or Sun TM JRE(Java Runtime Environment) 5.0 and above. You can get the Java Software from the website <http://www.java.com/en/download/>

4.2.1 Telnet Java Applet

1. Select Telnet protocol under Serial port > Configuration > Operation mode.

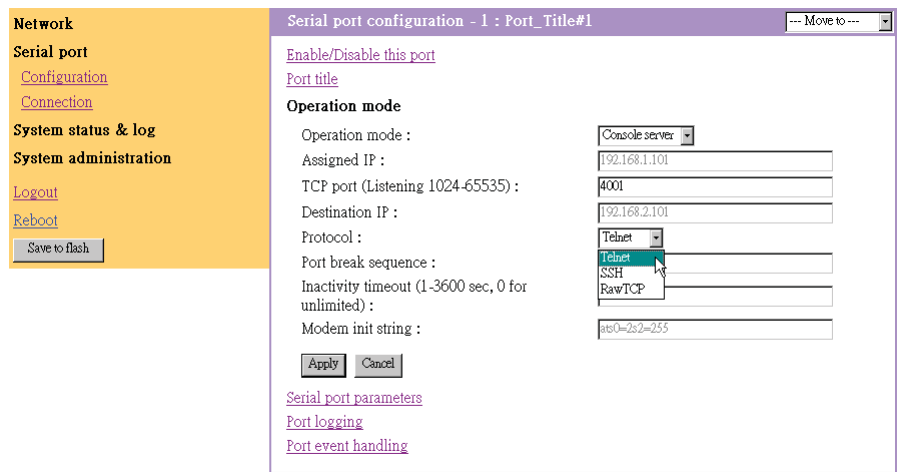

2. Select the Serial port > connection menu item, click the terminal icon at C column. If connect success, the terminal emulation will pop up login prompt.

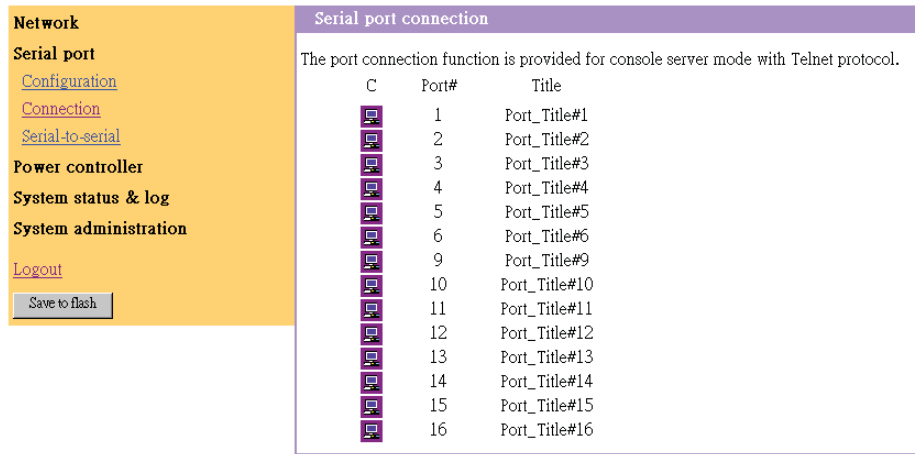

3. Enter user name and password to log in, so can start to use it as if running a Telnet client program (e.g., Telnet DOS program, PuTTY).



4.3.1 Serial-to-Serial Function

The web page also gives read-only settings of Serial-to-Serial function, it will auto-changed upon the setting change on VT100 console. Click Cancel will refresh the values.

Network

Serial port

[Configuration](#)

[Connection](#)

[Serial-to-serial](#)

Power controller

System status & log

System administration

[Logout](#)

Save to flash

Serial to serial configuration

Note: This function is available only if the Entry Serial Port (ESP) accessible

Enable/Disable this port

Enable/Disable this port : 

Disable

Connect to 

1 : Port\_Title#1

Set this port as factory default : 

Set to default

Operation mode

Inactivity timeout (1-3600 sec, 0 for unlimited) : 

0

Serial port parameters

Baud rate : 

9600

Data bits : 

8 bits

Parity : 

None

Stop bits : 

1 bit

Flow control : 

None

Apply

Cancel

4.3.2 Serial Power Control Function

The Serial Power Controller (SPC) is a family of intelligent power distribution units that enables remote power control of servers and network appliances. When used in conjunction with IP Console Servers, the SPC provides comprehensive management capabilities and quick problem resolution by integrating console access with power control into a single interface.

The SPC support both RS232 and RS485 interface. With RS485 mode, the SPC can be located up to 1.2km away from the controlling master, and has the Daisy- chain capability.

For detailed operation, please refer to the User Manual of Serial Power Controller.

## 5.1.1 System Status

System status data include the model name, serial number, firmware version, bootloader version, current time, and the network configuration of the IP serial console. User cannot change the data from this page.

Network	System status
Serial port	System information
System status & log	Company name :
<a href="#">System status</a>	Server name :
<a href="#">System logging</a>	Model No :
System administration	Serial No :
<a href="#">Logout</a>	Hardware ID :
<a href="#">Reboot</a>	F/W Rev :
<a href="#">Save to flash</a>	B/L Ver :
	MAC address :
	Current time :
	System logging :
	Send system log by email :
	IP information
	IP mode :
	IP address :
	Subnetmask :
	Gateway :
	Primary DNS :
	Secondary DNS :

This page will be automatically refreshed every 10 seconds, to show the system current time.

## 5.1.2 System Logging

The user may configure the IP serial console to enable or disable the system logging process and set the storage location. The system log buffer is pre-allocated at 300K bytes size. If the logging data grows larger than the pre-allocated size, the new data will overwrite the old data.

Network	System logging
Serial port	System logging :
System status & log	System log storage location :
<a href="#">System status</a>	System log to SYSLOG server :
<a href="#">System logging</a>	System log buffer size (KB, 300 max.) :
System administration	Send system log by Email :
<a href="#">Logout</a>	Number of log messages to send a mail (1-100) :
<a href="#">Reboot</a>	System log recipient's mail address :
<a href="#">Save to flash</a>	<a href="#">Apply</a> <a href="#">Cancel</a>
	System log :
	2006/08/10 07:42:54 08-10-2006 07:42:53.3105337344
	2006/08/10 07:42:57 IPCS
	2006/08/10 07:42:57 send to
	2006/08/10 08:43:28 08-10-2006 08:43:29.2485366784
	2006/08/10 08:46:09 IPCS
	2006/08/10 08:46:09 send to
	2006/08/10 08:49:24 IPCS
	2006/08/10 08:49:24 send to
	2006/08/10 08:49:38 IPCS
	2006/08/10 08:49:38 send to
	<a href="#">Clear</a> <a href="#">Refresh</a>

## 6.1.1 User Administration

At startup of the AP, the system will prompt user to enter the password to access to the system. The administrator can add or remove a user easily via the web pages.

There are two levels of access privileges:

User Name	Default Password	Access Privileges
root	root	full access
(user define)	(user define)	only can access to Serial Port and System Status & log

**Note :**

- The first character of User name must be alphabet.
- The password should be at least 3 characters long.
- The user name or password must not longer than 32 characters.
- Only root user can access to Network and System administration.

## 6.1.2 Add User

To add a user,

- Check the users at the User administration screen
- Click the button Add

#	Edit	User name
1		admin
2		root

Figure below shows the Add User screen.

You will see the new user is on the user list now.

#	Edit	User name
1		admin
2		root
3		tom

**6.1.3 Remove User**

To remove a user,

- Check the users at the User administration screen
- Click the button Remove

**6.1.4 Edit ACL**

IPCS Provides ACL (Access Control List) security function, each user may be authorized to access to certain ports only, instead of all ports. In other words, a particular port may only allow the authorized users to access.

To edit the ACL,

- Check the users at the User administration screen
- Click the Edit icon
- Enter user name & password
- Select the port to access to
- Click the button Submit

**Network**

**Serial port**

**System status & log**

**System administration**

[Users administration](#)

[Date and time](#)

[Firmware upgrade](#)

[Reset To Factory Default Settings](#)

[Logout](#)

[Reboot](#)

[Save to flash](#)

**Edit user**

User name : tom

Password : \*\*\*\*

Confirm password : \*\*\*\*

**Access Control List(ACL)**

☐ # Select all port

☒ 1

☒ 2

☒ 3

☐ 4

☒ 5

☐ 6

☒ 7

☐ 8

☒ 9

☒ 10

☐ 11

☐ 12

☒ 13

☐ 14

☒ 15

☐ 16

[Submit](#) [Cancel](#)

**6.1.5 Change password**

To change the parameters of the user account, open the edit user screen by selecting the user name at the user administration screen and then edit the parameters of user account like adding user.



The IPCS maintains current date and time information. The IPCS clock and calendar settings are backed up by internal battery power. The user can change the current date and time.

There are two methods of date and time settings. The first is to use the NTP server to maintain the date and time settings. If the NTP feature is enabled, the IPCS will obtain the date and time information from the NTP server at each reboot, then automatically align with the NTP server time per hour. If the NTP server is set to 0.0.0.0, the IPCS will automatically use the default NTP servers. In this case, the IPCS should be connected from the network to the Internet. The second method is to set date and time manually without using the NTP server. This will allow the date and time information to be kept maintained by the internal battery backup.

By convention, weather scientists use one time zone, Greenwich Mean Time (GMT). This time is also known as Universal Time (UTC). The user may also need to set the time zone and the time offset from UTC depending on the user location to set system date and time exactly, and the time offset from UTC. It allows the IPCS to calculate the exact system time. The Time offset value x could be positive or negative integer. Please refer to the website [http://time\\_zone.tripod.com/](http://time_zone.tripod.com/) for the time offset from UTC.



#### Note :

- The IP serial console provides RTC (Real Time Clock) function powered by a lithium battery (CR2032, 3V). So the data/time will be maintained even encounter power loss to the unit.
- If you repeatedly loss the date / time information please replace the battery.
- Replace the 3-Volt CR2032 battery only with the same or equivalent type recommended by the battery manufacturer. A new battery can explode if it is incorrectly installed. Discard the inappropriate one if possible.

Firmware can be easily upgraded via web page. This section describes the upgrade procedures.  
\*Pls contact you The latest firmware version is available on the web site.

## 6.3.1 Prepare Upgrade Environment


1. Need to obtain a TFTP server software program.
2. Startup tftp server (e.g., tftpd32). The website below kindly provides the software.  
[http://perso.orange.fr/philippe.jounin/tftpd32\\_download.html](http://perso.orange.fr/philippe.jounin/tftpd32_download.html).
3. Run the TFTP server software program, for example: tftpd32.exe
4. Select the directory folder where the upgrade image files reside at  
For example: Z:\IP-console\Release\v1.0 & 082306



### Note :

There are three possible images can be upgraded. But not all of the three images should be upgraded in each release. Most often, only need to upgrade the ramdisk image. The three images are:

- extpar
- zimage
- ramdisk

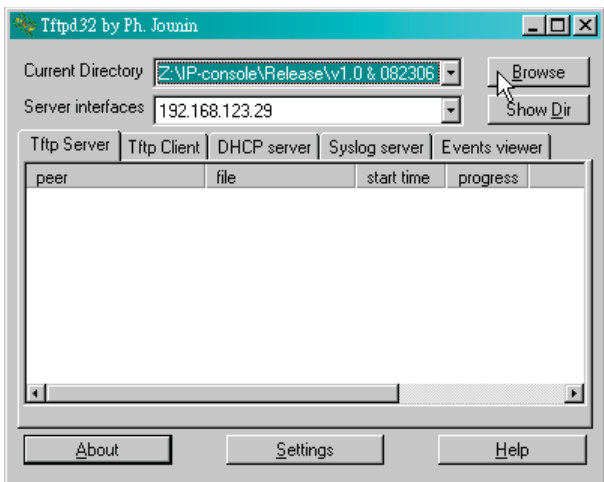

## 6.3.2 Upgrade from web page

Key in TFTP server IP address and image file name, then click Apply.

<b>Network</b>	<b>Firmware upgrade</b>
<b>Serial port</b>	TFTP server IP address : <input type="text" value="192.168.123.29"/>
<b>System status &amp; log</b>	Image filename : <input type="text" value="IFCS-16_zimage_v10_081006.img"/>
<b>System administration</b>	<input type="button" value="Apply"/> <input type="button" value="Cancel"/>
<a href="#">Users administration</a>	
<a href="#">Date and time</a>	
<a href="#">Firmware upgrade</a>	
<a href="#">Reset To Factory Default Settings</a>	
<a href="#">Logout</a>	
<a href="#">Reboot</a>	
<input type="button" value="Save to flash"/>	

After a few seconds, the message Flash program finished successfully will be shown, meaning the new firmware has been upgraded into the Flash memory.



### Warning :

During this upgrading process, we should not disconnect the power or the Ethernet cable, since it may cause upgrade failure and destroy the image in Flash memory. In this case, we have to upgrade through bootloader process, which is not as friendly as the web method.

## 6.3.2 Upgrade from web page


<b>Network</b>	Load image ...
<b>Serial port</b>	
<b>System status &amp; log</b>	loader: fetching file "IPCS-16_zImage_v10_081006.img" from 192.168.123.29
<b>System administration</b>	.....
<a href="#">Users administration</a>	.....
<a href="#">Date and time</a>	loader: got "IPCS-16_zImage_v10_081006.img", length=917504
<a href="#">Firmware upgrade</a>	
<a href="#">Reset To Factory Default Settings</a>	Erase Sector
<a href="#">Logout</a>	.....
<a href="#">Reboot</a>	Write Sector
<input type="button" value="Save to flash"/>	.....
	write zImage success
	Flash program finished successfully






If you want to run the new firmware, you need to click the Reboot item, then Yes to confirm to reboot the system. It will take about one minute to finish the system reboot. When the IPCS unit finishes the startup and working normally, the Ready green LED will blink every second.


**Warning :**

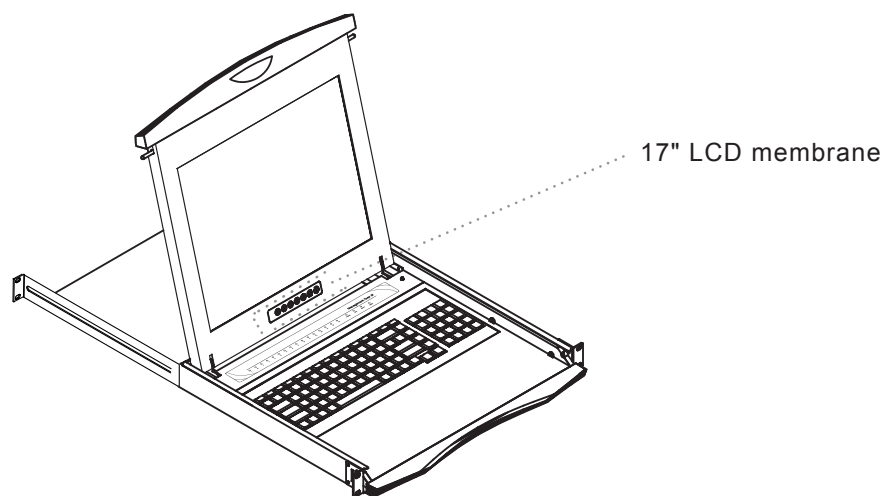A new firmware release version may need one, two, or up to three images to upgrade. You have to upgrade all to be upgraded images before rebooting the system. Otherwise may cause inconsistency between kernel and application firmware and the system may not be able to start up successfully. In this case, we have to upgrade through bootloader process, which is not as friendly as the web method.

---



Membrane Switch	Function
	Power light Green = On Orange = Power saving
	Power on / off LCD
	Display the OSD menu
	Scrolls through menu options and adjusts the displayed control
	Exit the OSD screen Shortcut key to auto adjustment by pressing the button for 5 seconds

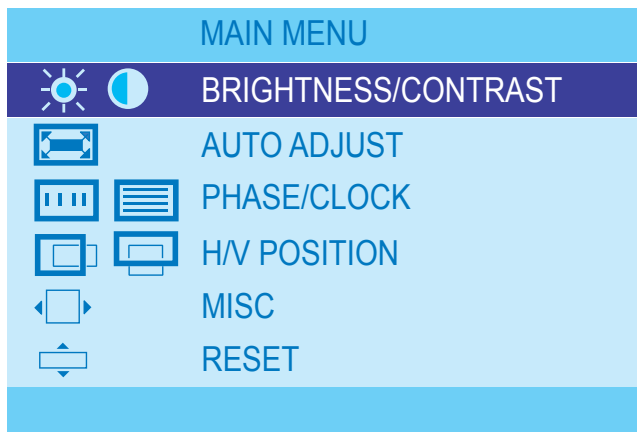**BRIGHTNESS / CONTRAST**

**Brightness:** Adjust background black level of the screen image.

**Contrast:** Adjust the difference between the image background (black level) and the foreground (white level).

**AUTO ADJUST**

**Auto Adjust:** Fine tunes the video signal to eliminate waviness and distortion. A "Adjusting" message is displayed during the process.

**Auto Tune:** Optimize phase, clock, position and size. An "Adjusting" message is displayed during the process.

**PHASE/CLOCK**

**Phase / Clock:** To enter into the phase & clock sub menu.

**H/V POSITION**

**H/V Position:** Align the screen image left or right and up or down.

**MISC**

**Information:** Display the current resolution, refresh rate and frequency information on the screen.


**OSD Timer:** Set the time duration in seconds that the OSD is visible after the last button is pressed. The factory default is 10 seconds.

**Color:** Select the screen color - 5500K, 6500K & 9500K. The factory default is 9500 K.

**Language:** Select the language in which the OSD menu is displayed - English, Chinese (中文), Japanese (日本語), German, French, Spanish, Italian.

**RESET**

Restore the settings to factory defaults.

Item		Description
Form Factor		1U rack mounting on slide-out rails
LCD Manufacturer		
Diagonal Size		17" TFT
Max. Resolution		800 x 600
Brightness (cd/m <sup>2</sup> )		300
Contrast Ratio (typ.)		700:1
Viewing Angle (H/V)		150° x 135°
Display Area (mm)		337 x 270
Color Support		16 colors
Serial Interface	Number of port	16-port
	Connector	RJ45
	Signal	Serial RS-232 Rx, Tx, RTS, DTR, DSR
	Flow	None, RTS / CTS, Xon / Xoff
	Baudrate	300 to 115200
	Mode	Console, terminal server, modem dial-in, power controller
LAN Interface	Port	1 x RJ45
	Type	IEEE802.3 - 10/100BaseT, auto-detecting
	Mode	Full / half-duplex selectable
Security		Password access, IP filtering, SSH v2, HTTPS / SSL
Authentication		Local user database, RADIUS, PAP/ CHAP (for modem dial-in)
Protocols		TCP, UDP, IP, ARP, ICMP, HTTP/ HTTPS, DHCP/BOOTP, Telnet, PPP, SMTP, DNS, NTP, Dynamic DNS
Protocols Relative Function		Port monitoring, Serial & TCP inactivity time
Management		Local console, web pages (HTTP/ HTTPS), SSH, telnet, port buffering and logging, system statistics, Email notification according to the equipment alarm message
Compatibility		SUN Solaris, IBM RS/6000 AIX, SCO Unix/ Xenix, interactive Unix systemsPC-based headless server, terminal server, router, firewall & switch
Power Input		Auto-sensing 100 to 240VAC, 50 / 60Hz
Power Consumption		Max. 40 Watt
Regulation Approval		FCC, CE
Keyboard		Multilingual keyboard selection
DC Power		DC power input with 12V, 24V, 48V selection


**Environmental**

Operation	0° to 50°C Degree
Storage	-5° to 65°C Degree
Relative Humidity	5~90%, non-condensing
Shock	10G acceleration (11ms duration)
Vibration	5~500Hz 1G RMS random vibration

Supporting layouts




N

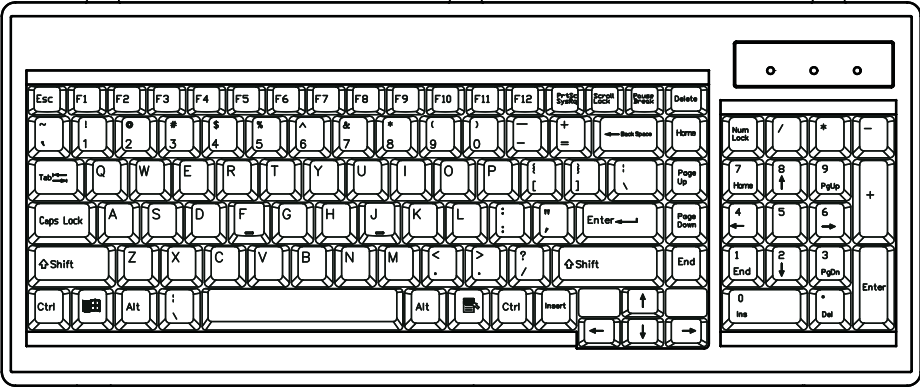

N keyboard with full numerical pad

- 104 keys (US / European / Chinese / Korean layout)
- 106 keys (Japan layout)
- PS/2 or USB connection

9.1 DC Power Options

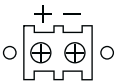

Chapter 9

Model	12V	24V	48V
<b>Input rating</b>			
Input voltage:	12-Volt	24-Volt	48-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V
<b>Input current</b>			
- No load	50 mA	50mA	50 mA
- Full load	4950 mA	2450 mA	1220 mA
<b>Output rating</b>			
Output voltage:	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A
<b>Efficiency</b>	84%	85%	85%


Remarks :

- Package does not include power cord and AC power adapter

### 1. The membrane button power light is not ON

Press the power On /Off on LCD membrane button to check if the monitor is in the ON mode.  
Check the power cord is properly connected to the LCD keyboard drawer and power outlet.

### 2. Screen image is not centered or sized properly

Press the  button for two seconds to automatically adjust the image.  
Adjust the H-position and V-position settings via On-screen menu.

### 3. The screen of NCP-1716 does not fit the monitor after auto adjust

You need to change the display setting as below :

- (1) Hold down the Alt and then depress the Esc key to enter setup mode.
- (2) Press F1 for display setup menu, select the Display by arrow key.
- (3) Press Spacebar to change Display = LCD
- (4) Then press F12 to exit, and press Spacebar save the setting.

Remark : Scroll lock must be off for accessing setup menu by "Alt + Esc" key

### 4. What devices and servers can the NCP-1716 16-port console terminal LCD keyboard drawer be used with ?

The NCP-1716 16-port console terminal LCD keyboard drawer is based on the RS-232-C protocol standard supported on most terminals, PCs, servers, as well as many manageable devices which equipped with at least one RS-232 serial port that is used as a console port when no keyboard is present.

### 5. What operating systems does the NCP1716 16-port console terminal drawer support?

There is no software to install on attached servers, so the console terminal can support a variety of operating systems. Third party software is only required on clients being used to access console terminal LCD keyboard drawer over the network.

### 6. How does the CAT5e cable connect to the servers?

We provide RJ45-DB9 female & RJ45-DB9 male adapters convert standard serial connections to RJ45.

### 7. How many users can concurrent remote access console server ?

The users can concurrent remote access console server webpage is unlimited, but every port can only be accessed by one user at the same time. The different port can also access at the same time.

### 8. How can we access the serial devices or headless server ?

- i, Direct terminal attachment
- ii, Dial access using serial applications such as HyperTerminal
- iii, Network access using IP-based applications such as Telnet or SSH



### 9. How long is the cable which can support on each serial port ?

The longest cable for supporting serial port is 15 meter.

### 10. What security features does the 16-port console terminal drawer support?

The 16-port console terminal's user database supports up to 200 user accounts, which include user names, passwords, plus specifications of access rights. User definitions can be changed at any time.

### 11. What I can't access the local console, after press the "Shift-Esc" key to reset default value ?

After press the "Shift+Esc" to reset the default value, the pre-set operating parameters are changed.

You need to change the setting as below :

In SETUP menu

- (1) Press **F1 Disp**,  
Display: change the CRT to LCD (press SpaceBar to change)
- (2) Press **F2 Genrl**,  
Personality: change the Wyse 120 to VT100,
- (3) Press **F4 Comm**,  
Baud rate: change 38400 to 9600.  
Parity: None (unchange)  
Data/Stop Bits: 8/1 (unchange)  
Rcv Hndshake: change Xon/Xoff to None  
Xmt Hndshake: change Xon/ Xoff to None.
- (4) Press F12 Exit, press "SpaceBar", then "Enter" to save the setting.

### 12. How can I change the different serial ports in local console?

Press Ctrl + C, you will quit the serial port, it will be back to serial to serial (S to S) menu.

### 13. What is the default IP setting?

The default is

IP mode:Static

IP address: 192.168.0.1

Subnet mask:255.255.255.0

Gateway:192.168.0.254

Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
NCP-1716	442 x 650 x 44 mm 17.4 x 25.6 x 1.73"	589 x 856 x 168 mm 23.2 x 33.7 x 6.6"	16 kg 35 lb	22 kg 48 lb



The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2007 Austin Hughes Electronics Ltd. All rights reserved.

CV-NCP22-0807V1