

# **User Manual**

2U Dual Slides LCD Keyboard Drawer 15", 17", 19" screen size



Models RKP215 / 217 / 219 Series



Models RKP2415 / 2417 / 2419 Series

- Short depth version

# **Contents**

Chapter 1	Get	ting Started	
•	1.1	Important Safeguards	1
	1.2	Regulatory Notice	2
	1.3	Package Contents	3
	1.4	Before Installation	4
	1.5	Unpacking	4
	1.6	Optional Accessories	4
	1.7	Peripheral Products	5
	1.8	Structure Diagram	5
	1.9	Installation	6
	1.10	How to Use Dual Slide	7
	1.11	Connect to Server via USB Interface	8
	1.12	Connect to KVM via USB Interface	8
	1.13	Connect to Server via PS/2 Interface	9
		Connect to KVM via PS/2 Interface	
Chapter 2	Ope		
	2.1	On-screen Display Operation	
	2.2	On-screen Menu	11
Chanter 3	Star	ndard Specification	
Chapter 3	3.1	ndard Specification Specifications	12
	3.1	Keyboard & Mouse	
	3.2	Reyboard & Mouse	13
Chanter 4	Ont	ional Specification	
Chapter 1	4.1	KVM Options	14
	4.2	DVI-D Input Option	
	4.3		
	4.4	S-Video + BNC Input Option	
	4.5	On-screen Menu for DVI, BNC, S-Video & RCA Input	
	4.6	DC power Options	
	4.7	Touchscreen Options	
Chapter 5	Tro	ubleshooting	18
Chapter 6	Dim	nensions	19
1			-

## 1.1 Important Safeguards

**Chapter 1** 

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

### What the warranty does not cover

Any product, on which the serial number has been defaced, modified or removed.
Damage, deterioration or malfunction resulting from:
☐ Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
☐ Repair or attempted repair by anyone not authorized by us.
☐ Any damage of the product due to shipment.
☐ Removal or installation of the product.
☐ Causes external to the product, such as electric power fluctuation or failure.
☐ Use of supplies or parts not meeting our specifications.
□ Normal wear and tear.

■ Removal, installation, and set-up service charges.

 $\hfill \square$  Any other causes which does not relate to a product defect.

## 1.2 Regulatory Notice

## **Chapter 1**

#### **Legal Information**

First English printing, October 2002

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

#### **Safety Instructions**

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the drawer is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equip ment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

### Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# 1.3 Package Contents

# **Chapter 1**

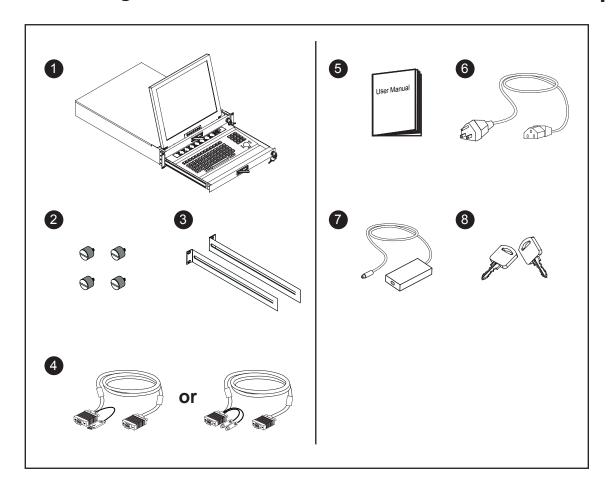

- 1 LCD keyboard drawer x 1 pc
- 2 Fasteners for rear L-bracket x 4 pcs
- 3 330mm rear mounting L-bracket x 1 pair
  - \* RKP215 / 217 / 219 series mounting depth-adjustable from 270 to 870mm
  - \* RKP2415 / 2417 series mounting depth-adjustable from 110 to 710mm
  - \* RKP2419 series mounting depth-adjustable from 150 to 750mm
- (4) CB-6 2-in-1 USB KVM cable x 1 pc Ol CD-6 3-in-1 PS/2 KVM cable x 1 pc
- (5) User manual x 1 pc
- 6 Power cord x 1 pc
- 7 Auto switch power adapter (for external power version) x 1pc
- 8 Key x 2 pcs

### 1.4 Before Installation

**Chapter 1** 

- It is very important to locate the LCD Keyboard Drawer in a suitable environment.
- The surface for placing and fixing the LCD Keyboard Drawer should be stable and level or mounted into a suitable cabinet.
- Make sure the place has good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.
- Position LCD keyboard drawer with respect to related facilities.

## 1.5 Unpacking

The LCD keyboard drawer comes with the standard parts shown on the package contents. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.

## 1.6 Optional Accessories

#### 1. PS/2 3-in-1 KVM cable

1.1 CD-6 6 feet

1.2 CD-10 10 feet

1.3 CD-15 15 feet

1.4 CD-33 33 feet

#### 2. USB 2-in-1 KVM cable

2.1 CB-6 6 feet

2.2 CB-10 10 feet

2.3 CB-15 15 feet

#### 3. SUN / iMAC USB to PS/2 adapter

3.1 SUN-31

#### 4. Extended rear mounting L-bracket

4.1 430mm (16.9") extended rear L-bracket for :

RKP215/217/219 series up to 970mm

RKP2415/2417 series up to 810mm

RKP2419 series up to 850mm

\*Extended rear L-bracket in tailor-made length on request

#### 5. Power Cord

5.1 IEC power cord

5.2 NEMA 5-15 power cord (US)

5.3 BS 1363 power cord (UK)

5.4 CEE 7/4 power cord (German)

5.5 AS 3112 power cord (Australia)




# 1.7 Peripheral Products

# Chapter 1

Item	Model No.	Description
DB-15 KVM	IP-802 / IP-1602 CV-802 / CV-1602 CV-401 / CV-801 / CV-1601 CV-S801 / CV-S1601	8 / 16-port IP PS/2 KVM 8 / 16-port two console PS/2 KVM 4 / 8 / 16-port PS/2 KVM 8 / 16-port USB KVM
Cat5 KVM	UIP-1602 / UIP-3202 U-1602 / U-3202 U1601 / U3201	16/ 32-port IP Cat5 KVM 16 / 32-port two console Cat5 KVM 16 / 32-port high density Cat5 KVM
KVM Extender	IP-101 CV-101 CV-S101	IP KVM extender Cat5 PS/2 KVM Extender Cat5 USB KVM Extender

# 1.8 Structure Diagram

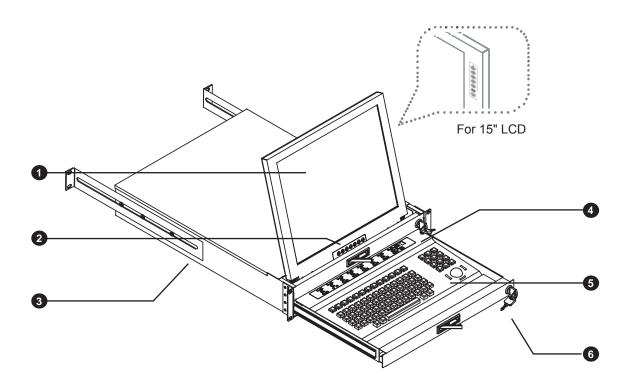

- ① SAMSUNG Class A TFT LCD panel
- ② LCD membrane button
- 3 Adjustable rear mounting L-bracket
- 4 Membrane switch (KVM option)
- S Keyboard & mouse
- 6 Lock with keys

# 1.9 Installation Chapter 1

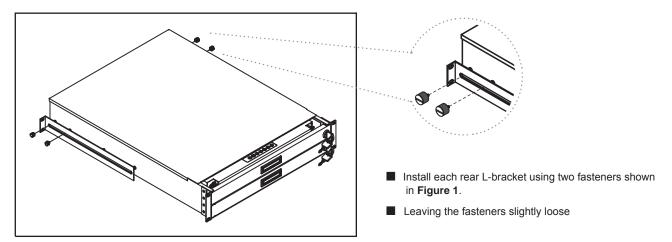


Figure 1. Installing the rear L-bracket to the LCD keyboard drawer.

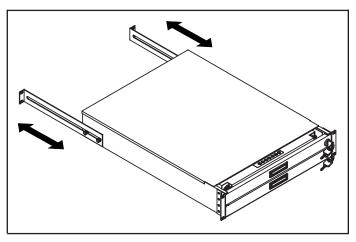


Figure 2. Aligning the rear L-brackets to a suitable length for the rack.

- Measure the front and rear mounting depth of the rack.
- Align each rear L-bracket to a suitable length and tighten the fasteners shown in **Figure 2**.

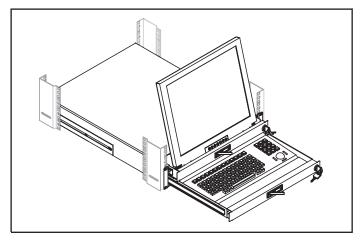


Figure 3. Fixing the LCD keyboard drawer into the rack.

- Fixed the the LCD keyboard drawer into the rack.
  - \* Hardware (screws and cage nuts) for fixing the mounting bracket to the rack is not provided.

### 1.10 How to Use The Dual slide

# **Chapter 1**



Figure 4. Pulling the handle toward the front of keyboard drawer.

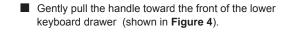




Figure 5. Pulling the handle toward the front of LCD drawer.

■ Push the handle toward the front of the upper LCD drawer (shown in **Figure 5**).



Figure 6. Flipping up the LCD to a suitable angle.

■ Flip up the LCD to a suitable angle shown in **Figure 6**.



Figure 7. Operating the LCD keyboard drawer.

■ Operate the LCD keyboard drawer shown in **Figure 7**.

### 1.11 Connect to Server via USB Interface

# **Chapter 1**

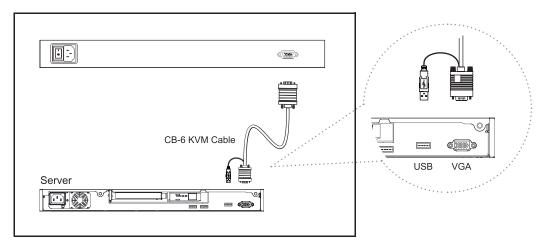


Figure 8. Example of connecting CB-6 2-in-1 USB KVM cable to server via USB interface

### 1.12 Connect to KVM via USB Interface

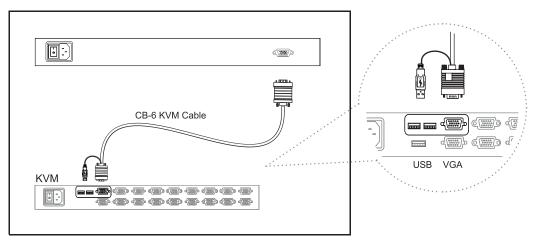


Figure 9. Example of connecting CB-6 2-in-1 USB KVM cable to KVM via USB interface

#### Remarks

- The above connection is only for the LCD keyboard without KVM switch built-in.
- For the LCD keyboard drawer with KVM switch built-in, please refer to attached KVM switch user manual.

### 1.13 Connect to Server via PS/2 Interface

## **Chapter 1**

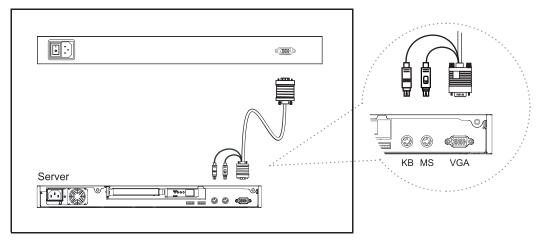


Figure 10. Example of connecting CD-6 3-in-1 PS/2 KVM cable to server via PS/2 interface

### 1.14 Connect to KVM via PS/2 Interface

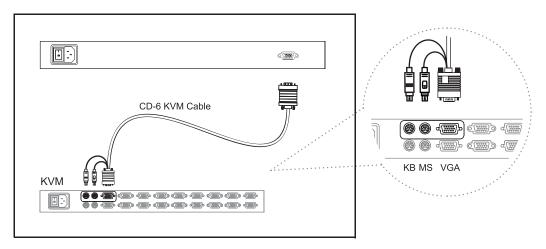


Figure 11. Example of connecting CD-6 3-in-1 PS/2 KVM cable to KVM via PS/2 interface

#### Remarks


- The above connection is only for the LCD keyboard without KVM switch built-in.
- For the LCD keyboard drawer with KVM switch built-in, please refer to attached KVM switch user manual.



Caution: The LCD keyboard drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD keyboard drawer. Before attempting to connect anything to the LCD keyboard drawer, we suggest turning off the power to all devices before connecting them. Apply power to connected devices again only after the LCD keyboard is receiving power. The company is not responsible for damage caused in this way.

# 2.1 On-screen Display Operation

# Chapter 2

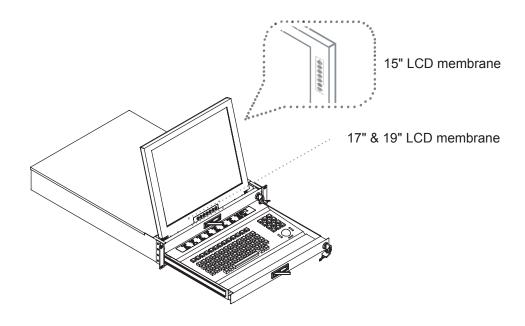

Membrane Switch	Function
0	Power light
•	Green = On
•	Orange = Power saving
	Power on / off LCD
M	Display the OSD menu
$\diamondsuit \diamondsuit \diamondsuit \diamondsuit$	Scrolls through menu options and adjusts the displayed control
	Exit the OSD screen Shortcut key to auto adjustment by pressing the button for 5 seconds <b>Of</b> Toggle analog, digital & video connection (DVI-D and video options only)

2.2 On-screen Menu Chapter 2



#### **BRIGHTNESS / CONTRAST**

Brighthtness: Adjust background black level of the screen image.

Contrast: Adjust the difference between the image background (black level)

and the foreground (white level).

#### **AUTO ADJUST**

Auto Adjust: Fine tunes the video signal to eliminate waviness and distortion. A "Adjusting" message is displayed

during the process.

Auto Tune: Optimize phase, clock, position and size. An "Adjusting" message is displayed during the process.

#### PHASE/CLOCK

Phase / Clock: To enter into the phase & clock sub menu

#### **H/V POSITION**

H/V Position: Align the screen image left or right and up or down.

**MISC** 

Information: Display the current resolution, refresh rate and frequency information on the screen.

OSD Timer: Set the time duration in seconds that the OSD is visible after the last button is pressed. The factory

default is 10 seconds.

Color: Select the screen color - 5500K, 6500K & 9500K. The factory default is 9500 K.

Language: Select the language in which the OSD menu is displayed -

English, Chinese (中文), Japanese (日本語), German, French, Spanish, Italian

**RESET** Restore the settings to factory defaults.

# 3.1 Specifications

Item	Description			
Form Factor	1U rack mounting on slide-out rails			
LCD Manufacturer		SAMSUNG		
Diagonal Size	15" TFT	17" TFT	19" TFT	
Max. Resolution	1024 x 768	1280 x 1024	1280 x 1024	
Brightness (cd/m²)	Min. 250	300	300	
Color Support	16.2 Mil.	16.2 Mil.	16.7 Mil.	
Contrast Ratio (typ.)	450:1	700:1	1000:1	
Viewing Angle (H/V)	130° x 100°	150° x 135°	150° x 135°	
Display Area (mm)	304 x 228	337 x 270	376 x 301	
Tr Response Time (ms)	3	2	1.3	
VGA Signal Input	Analog RGB, 0.7Vp-p			
Sync. Type		Separate H/V, Composite, SOG		
	640 x 350, 70 Hz	640 x 350, 70 Hz		
	720 x 400, 70 Hz	720 x 400, 70 Hz		
	640 x 480, 60/ 72/ 75 Hz	640 x 480, 60/ 72/ 75 Hz		
Resolution	800 x 600, 60/ 70/ 72/ 75 Hz	800 x 600, 60/ 70/ 72/ 75 Hz		
	1024 x 768, 60/ 70/ 72/ 75 Hz	1024 x 768, 60/ 70/ 72/ 75 Hz		
		1152 x 864, 60/ 70/ 75 Hz		
	1280 x 1024, 60/ 70/ 75 Hz			
Plug & Play DDC	EDID 1.3			
Console Port (Combo)	3-in-1 DB-15 connector for VGA / keyboard /mouse Support USB & PS/2 servers or KVM Switches			
Power Input	Auto-sensing 100 to 240VAC, 50 / 60Hz			
Power Consumption	Max. 40 Watt, Standby 5 Watt			
Compatilibity	Multi-platform - Mix PCs, SUNs, IBMs, HPs & DELLs.			
Regulation Approval		FCC, CE		

# Options


KVM Integration	Cat5 & DB-15 KVM with IP console and 2-console selection
Keyboard & mouse	Full size keyboard built-in touch-pad / trackball
Graphic Input	DVI-D, BNC, S-Video & RCA video input
DC Power	DC power input with 12V, 24V, 48V selection
Touchscreen	Resistive and capacitive type touchscreen selection


## Environmental

Operation	0° to 50°C Degree
Storage	-5° to 65°C Degree
Relative Humidity	5~90%, non-condensing
Shock	10G acceleration (11ms duration)
Vibration	5~500Hz 1G RMS random vibration

## 3.2 Keyboard & Mouse

# **Chapter 3**

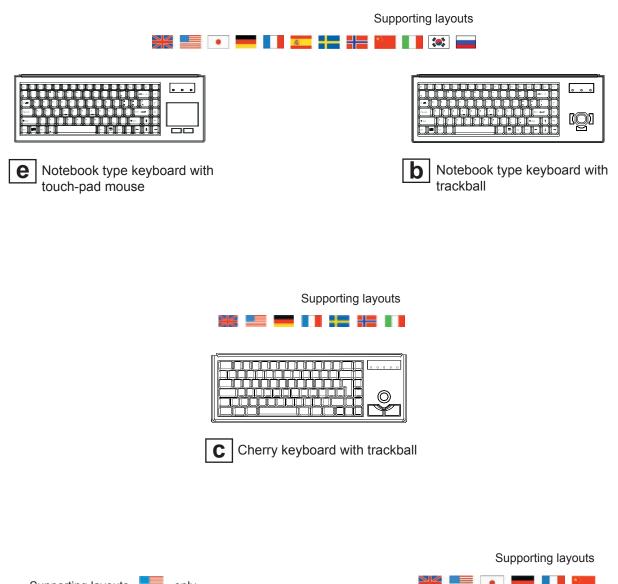

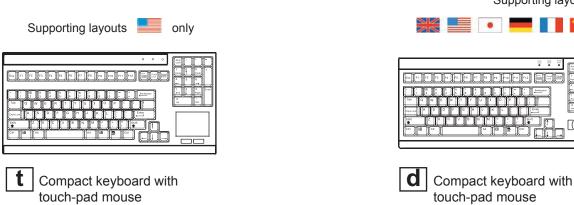

### Remarks

- All keyboards are applicable to RKP215 / 217 / 219 series
- Only "e", "b" & "c" keyboards are applicable to RKP2415 / 2417 / 2419 series


## 4.1 KVM Options

# **Chapter 4**

Our KVM is designed to seamlessly integrate into the rear of our full range of LCD drawer solutions:

- For KVM operation, pls refer to "Integrated LCD KVM Switch" user manual
- Option with high desnsity Cat5 KVM with either 16 or 32 ports
- Option with cost efficient DB-15 KVM integration with either 8 or 16 ports
- Please ask your supplier for full KVM details


## 4.2 DVI-D Option

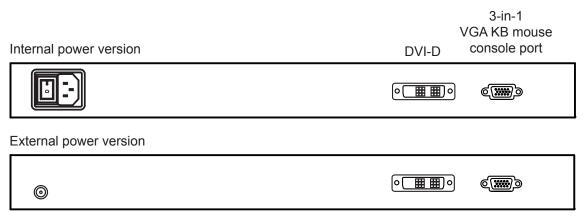

#### Remarks

■ Package includes a 6' DVI-D cable

## 4.3 S-Video + RCA Input Option

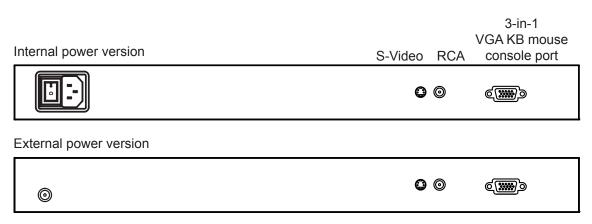

#### Remarks:

■ Package includes an extra 6ft S-Video and 6ft RCA cables

# 4.4 S-Video + BNC Input Option

# **Chapter 4**

#### Remarks:

■ Package includes an extra 6ft S-Video cable

# 4.5 On-screen Menu for DVI, BNC, S-Video & RCA Input Chapter 4

### 1. Image

Brightness: Adjust background black level of the screen image Contrast: Adjust the difference between the image background

(black level) and the foreground (white level)

Sharpness: Adjust the image from weak to sharp Saturation: Adjust the saturation of the image color

Hue: Adjust the screen hue value



### 2. Geometry

Auto Config: Adjust automatically sizes, centers, and fine tunes the video

signal to eliminate waviness and distortion. An "Adjusting"

message is displayed during the process.

H. Position: Align the screen image left or rightV. Position: Align the screen image up or down

Clock : Adjust the clock value

Phase: Adjust the phase value



#### 3. Function

OSD Position: Adjust OSD menu horizontal and vertical position

OSD Zoom: Adjust the difference between the image background

(black level) and the foreground (white level).

Color Temp: Select the screen color - 5500K, 6500K & 9500K.

The factory default is 6500 K.



#### 4. System

Language: Select the language in which the OSD menu is displayed -

English, Chinese (中文), Japanese (日本語), German,

French, Spanish, Italian.

Time: Function is not supported Power OFF: Function is not supported

Reset: Recall returns the adjustments back to factory settings.





**Note**: The current resolution and refresh rate information show on the top right hand side of the screen when the LCD is powered on.

# 4.6 DC Power Options



Model	12V	24V	48V
Input rating			
Input voltage:	12-Volt	24-Volt	48-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V
Input current			
- No load	50 mA	50mA	50 mA
- Full load	4950 mA	2450 mA	1220 mA
Output rating			
Output voltage:	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A
Efficiency	84%	85%	85%

#### Remarks

- Package does not include power cord and AC power adapter
- In RKP2415-1601 / 2417-1601 series, the depth will be extended for 440mm (17.3") to 480mm (18.8")
- In RKP2419-1601 series, the depth will be extended for 480mm (18.8") to 520mm (20.5")

# 4.7 Touchscreen Options



### e-Resistive

Model	-15TRB / -15TRS	-17TRB / -17TRS	-19TRB / -19TRS
Screen size	15"	17"	19"
Interface		USB or Serial	
Optical transmittance		82%±5%	
Surface hardness		≥3H (JIS K5400)	
Operating system	Windows 9	8 / 2000 / ME / XP / NT / CE,	DOS, Linux

### **3M Capacitive**

Model	-15TCB_3M/-15TCS_3M	-17TCB_3M/-17TCS_3M	-19TCB_3M/-19TCS_3M
Screen size	15"	17"	19"
Interface		USB or Serial	
Optical transmittance		88%	
Surface hardness		Mohs' hardness rating: 6	
Operating system	Windows 9	8 / 2000 / ME / XP / NT / CE, [	DOS, Linux

#### Remarks

- USB touchscreen package includes an extra 6ft USB cable, quick reference guideline and CD disc
- Serial touchscreen package includes an extra 6ft serial cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully.

## 5.1 Troubleshooting

**Chapter 5** 

#### 1. How do I adjust the resolution?

To change monitor resolution, click Start -> Control Panel -> Display. Select Setting tab to adjust the monitor resolution in Desktop Area. The available resolutions, "640 x 480", "800 x 600", "1024 x 768", "1152 x 864", "1280 x 1024", are determined by the display card in your computer.

#### 2. Is interference signal appeared on LCD normal when shutting down the computer?

In rare cases, interference may appear on the monitor. This may be caused by signal rate of VGA card and is considered normal. The image quality can be improved by adjusting the phase or pixel rate automatically or manually.

#### 3. The membrane button power light is not ON

Press the power On /Off on LCD membrane button to check if the monitor is in the ON mode. Check the power cord is properly connected to the LCD keyboard drawer and power outlet.

#### 4. Screen image is not centered or sized properly

Press the button for two seconds to automatically adjust the image. Adjust the H-position and V-position settings via On-screen menu.

#### 5. Is the LCD keyboard drawer hot-pluggable?

The LCD keyboard drawer is hot-pluggable, but components of connected devices, such as the servers and KVMs, may not be hot-pluggable. We suggest turning off the power to all devices before connecting them. Apply power to connected devices again only after the LCD keyboard receives power.

6.1 Dimensions Chapter 6

Model	Product Dimension	Packing Dimension	Net	Gross
	(W x D x H)	(W x D x H)	Weight	Weight
RKP215 series	442 x 600 x 88 mm	581 x 753 x 216 mm	17 kg	23 kg
	17.4 x 23.6 x 3.5"	22.9 x 29.6 x 8.5"	37 lb	51 lb
RKP217 series	442 x 600 x 88 mm	581 x 753 x 216 mm	18 kg	24 kg
	17.4 x 23.6 x 3.5"	22.9 x 29.6 x 8.5"	40 lb	53 lb
RKP219 series	442 x 600 x 88 mm	581 x 753 x 216 mm	19 kg	25 kg
	17.4 x 23.6 x 3.5"	22.9 x 29.6 x 8.5"	42 lb	55 lb
RKP2415 series	442 x 440 x 88 mm	584 x 601 x 216 mm	17 kg	23 kg
	17.4 x 17.3 x 3.5"	23 x 23.7 x 8.5"	37 lb	51 lb
RKP2417 series	442 x 440 x 88 mm	584 x 601 x 216 mm	18 kg	24 kg
	17.4 x 17.3 x 3.5"	23 x 23.7 x 8.5"	40 lb	53 lb
RKP2419 series	442 x 480 x 88 mm	584 x 616 x 216 mm	19 kg	25 kg
	17.4 x 18.9 x 3.5"	23 x 24.3 x 8.5"	42 lb	55 lb

